

**Futaba**

1M23N17457

# R614FF-E

**FASST-2.4GHz System  
Built-in Antenna  
4-Channel Receiver  
for EP Car Models**



## ⚠ WARNING

⊘ **NEVER** use dry batteries for the power supply of the R614FF-E as this may cause difficulties with the receiver's operation.

⊘ **NEVER** use the R614FF-E in GP cars.

❗ Wrap the receiver with something soft, such as foam rubber, to avoid vibration. Do not splash water over the receiver.

❗ Since the receiver generates a certain amount of heat, install the place with good ventilation.

Thank you for purchasing the R614FF-E receiver.

The R614FF-E is designed for use with the Futaba FASST-C2 system transmitter. The FASST system has two(2) operation mode as shown below.

### •Normal mode/High Speed mode

The "Normal mode" accepts any type of servos or the peripheral equipment. The "High Speed mode" only accepts the digital servos, including BLS series, and most peripheral equipment such as the brushless ESCs. However, there is a transmitter that cannot correspond, to high speed mode.

Please pay special attention to the information contained within this manual and transmitter's manual in order to have a pleasant running experience.


### •Built-in antenna

The R614FF-E receiver is designed to be used only for EP Car models.

**The R614FF-E is compatible with the FASST-C2 system transmitters.**

**Note: The R614FF-E is compatible with the FASST-C2 system transmitters (Futaba T4PK/T4PKS).**

**\*Futaba FASST system does not work with current Futaba S-FHSS/FHSS system.**

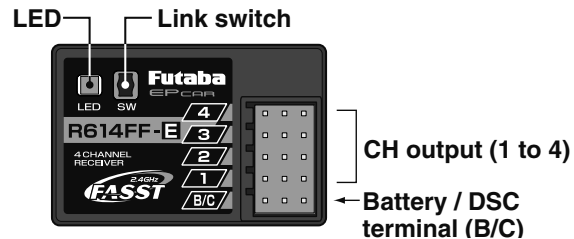

Usage condition on "High Speed mode"

## ⚠ CAUTION

❗ When using the high-speed mode, use a Futaba digital servo (including brushless servo). Analog servos cannot be used.

•The use of analog servos may cause servo trouble.

### Operating Precautions:

Once the R614FF-E detects the FASST normal mode or FASST high speed mode, the detected mode is locked as long as the power is ON. When need to change the mode, please cycle power.

## Link Procedure

Each transmitter has an individually assigned, unique ID code. In order to start operation, the receiver must be linked with the ID code of the transmitter with which it is being paired. Once the link is made, the ID code is stored in the receiver and no further linking is necessary unless the receiver is to be used with another transmitter.

- 1 Place the transmitter and the receiver close to each other within half (0.5) meter.
- 2 Turn on the transmitter and the receiver.
- 3 Push and hold the Link switch on the receiver.
- 4 When the link is complete, the LED on the receiver changes to solid green.

\*Please refer to the table below for LED status and receiver condition.

No signal reception	LED: Red
Receiving signals	LED: Green
Receiving signals, but ID is unmatched.	LED: GreenBlink
Unrecoverable failure (EEPROM, etc.)	LED: Red and Green turn on alternately

\*If there are many FASST systems turned on around your receiver, it might not link to your transmitter. In this case, even if the receiver's LED stays solid green, unfortunately the receiver might have established a link to one of the other transmitters. This is very dangerous if you do not notice this situation. In order to avoid the problem, we strongly recommend you to double-check whether your receiver is controlled by your transmitter by giving throttle input, etc. and then checking servo response.

## ⚠ WARNING

❗ After the linking is done, please cycle receiver power and check if the receiver to be linked is really under the control by the transmitter to be linked.

⊘ Do not perform the linking procedure with motor's main wire connected or with the engine operating as it may result in serious injury.

## R614FF-E Specifications:

(FASST system, 4-channel receiver)

- Receiving on 2.4GHz band
- System: FASST-C2 system
  - At Normal/High speed mode (auto detection)
- Receiving Range : 70m (230ft.)(at the best conditions)
- Power requirement Rated voltage: 3.7V-7.4V / Usable voltage: 3.5-8.4V
- F/S and Battery F/S function: It is set according to the transmitter used.
- Battery F/S voltage: Set it with the transmitter arbitrarily.
- Size: 1.38x0.91x0.35" (35.1x23.2x9.0mm)
- Weight: 0.27oz. (7.6g)

## Compliance Information Statement (for U.S.A.)

This device, trade name Futaba Corporation of America, model number R614FF-E, complies with part15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The responsible party of this device compliance is:

FUTABA Corporation of America

2681 Wall Triana Hwy Huntsville, AL 35824, U.S.A.

Phone: 1-256-461-9399 FAX: 1-256-461-1059 E-mail: service@futabaUSA.com

FUTABA CORPORATION

oak kandakajicho 8F 3-4 Kandakajicho, Chiyoda-ku, Tokyo 101-0045, Japan TEL: +81-3-4316-4820, FAX: +81-3-4316-4823

©FUTABA CORPORATION 2018, 5 (2)