


Gyro Program Box

# **GPB-1**

*for GYA553/573 (Ver.6.0)*

*Software Update Functions*

**GYA553 / GYA573**

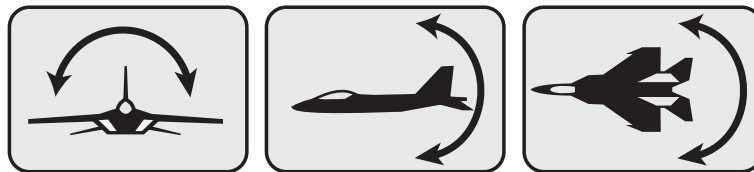


## GPB-1 Software Update Procedure

### GPB-1 UPDATE


The GPB-1 can be updated from PC using CIU-2 or CIU-3.

- \* The following optional products are required for the update.
- CIU-2 or CIU-3
- Cable for CGY760R / GY701 / GY520 or DSC cable for update
- Receiver battery

1. Download the CGY760R update file from our website or your local distributor's website.
2. Extract the zip file on your computer.

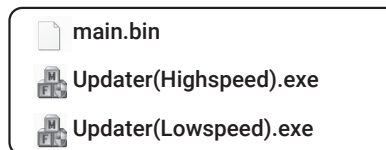

3. Connect as shown in the figure.

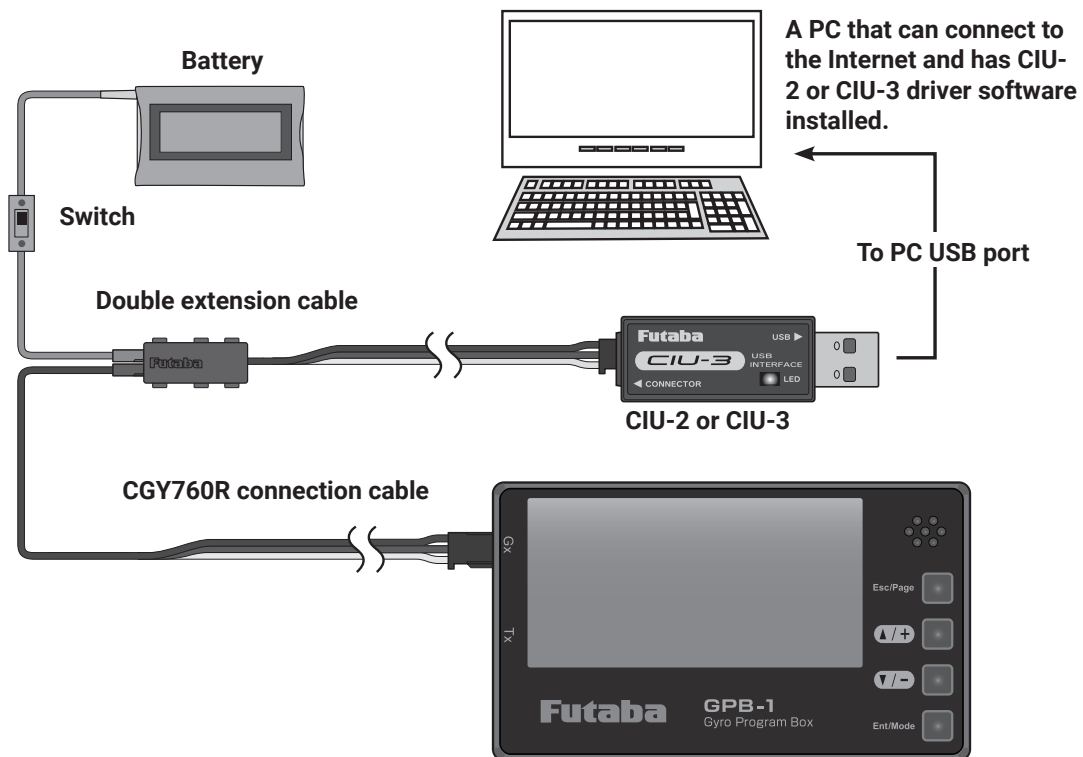

## PC side



### PC

5. Start an executable file by a PC.

CIU-3  Updater(Highspeed).exe


CIU-2  Updater(Lowspeed).exe

Double  
-click

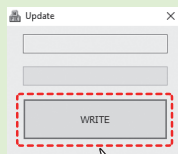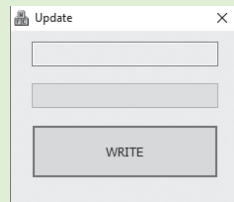


Click [WRITE]

WRITE

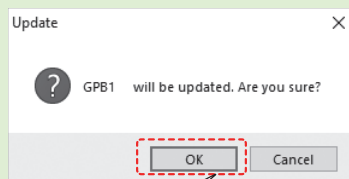

Click [OK]


OK

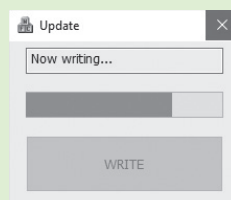

## GPB-1 side

### GPB-1


4. When using the CIU-3, hold down the [Enter] and [Esc/Page] keys of the GPB-1 and turn on the power. Release the [Enter] and the [Esc / Page] keys when the backlight of the screen lights up.

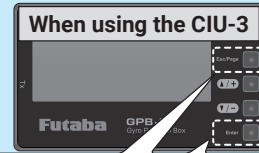

Press the [Enter] and [Esc/Page] keys next turn ON



When using the CIU-2, hold down the [▲/+] and [▼/-] keys of the GPB-1 and turn on the power. Release the [▲/+] and [▼/-] keys when the backlight of the screen lights up.

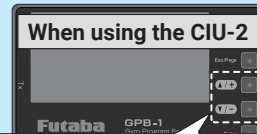

Press the [▲/+] and [▼/-] keys next turn ON



#### When using the CIU-3


PROGRAM UPDATE <HI>  
READY

#### When using the CIU-2

PROGRAM UPDATE  
READY

### ⚠CAUTION


⊙ Do not turn off the power or remove the battery while updating. GPB-1 may be damaged.

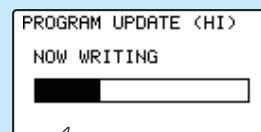



Wait for about 50 seconds - 5 minutes.

Don't turn on the power !

## PC side

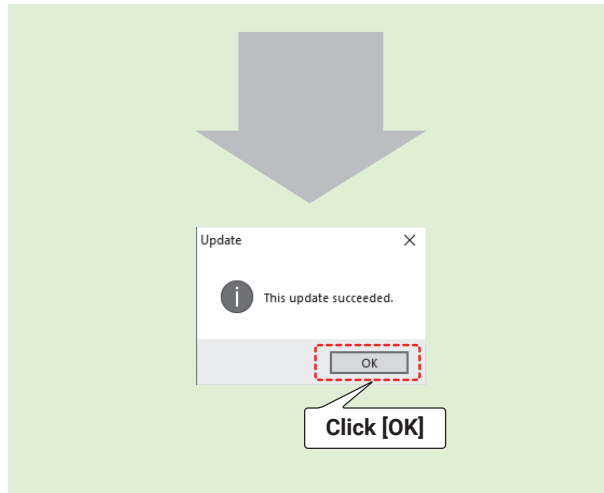

## GPB-1 side

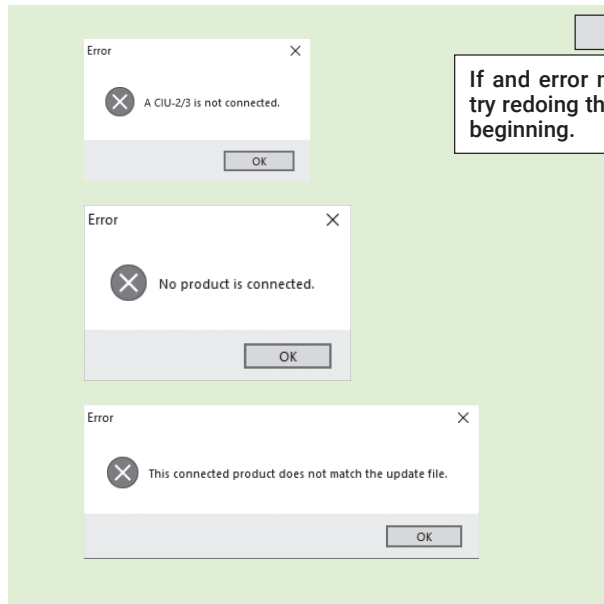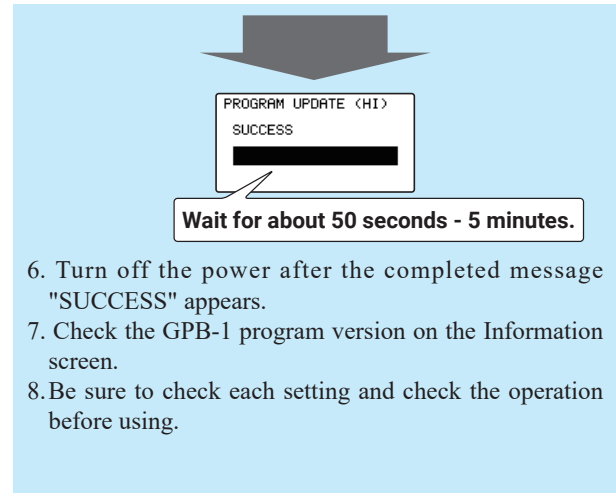

### Error

If an error message appears, try redoing the update from the beginning.



If the cable disconnects or a contact failure occurs during the update, the update stops halfway. In that case, please try updating again from the beginning.

If the GPB-1 fails to update or does not start, please have it serviced.

## Ver.6.0

Compatible with airplane gyro GYA573. Ver.6.0 is for airplanes only. Helicopter gyros cannot be used.

## Ver.5.2

Supported servo type change of S-HC501.

## Ver.5.1

Added function of gyro GYA553 V4~ for Airplane

## Ver.5.0


Added function of gyro CGY770R for helicopter

## Ver.4.4

1. Supported servo type change of HPS-H701.

2. Compatible with Ver2.0 of HPS-HC701 and HPS-HT700.

Before the update, V1 will be displayed, and after the Ver2.0 update, V2 will be displayed.

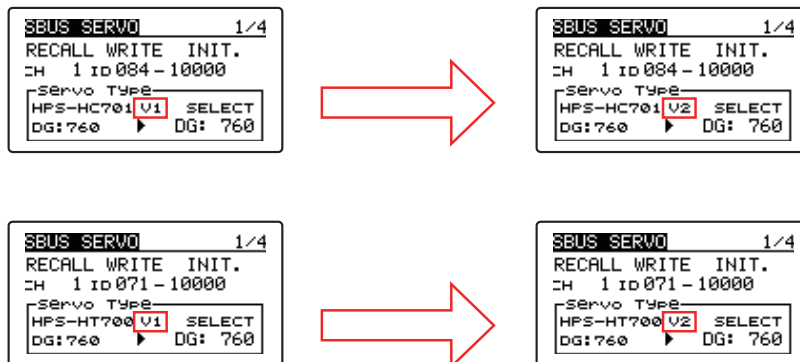

## Ver.4.3

Supported servo type change of HPS-HC701 and HPS-HT700.

## Ver.4.2

Added function of gyro GYA553 for airplane


1. Added Aileron 3/Aileron 4.

2. S.BUS(HS)---SV servo and S.BUS(STD)---S3175HV, DLPH-1, etc. can be selected with SB/RU2 output (S.BUS output).

### GYA553 --- Added AIL / ELE / RUD "Holding PWR" setting to parameter setting


You can adjust the attitude holding force of the aircraft in AVCS mode.

Decreasing the value weakens the holding power and makes the operation feeling closer to the normal mode.

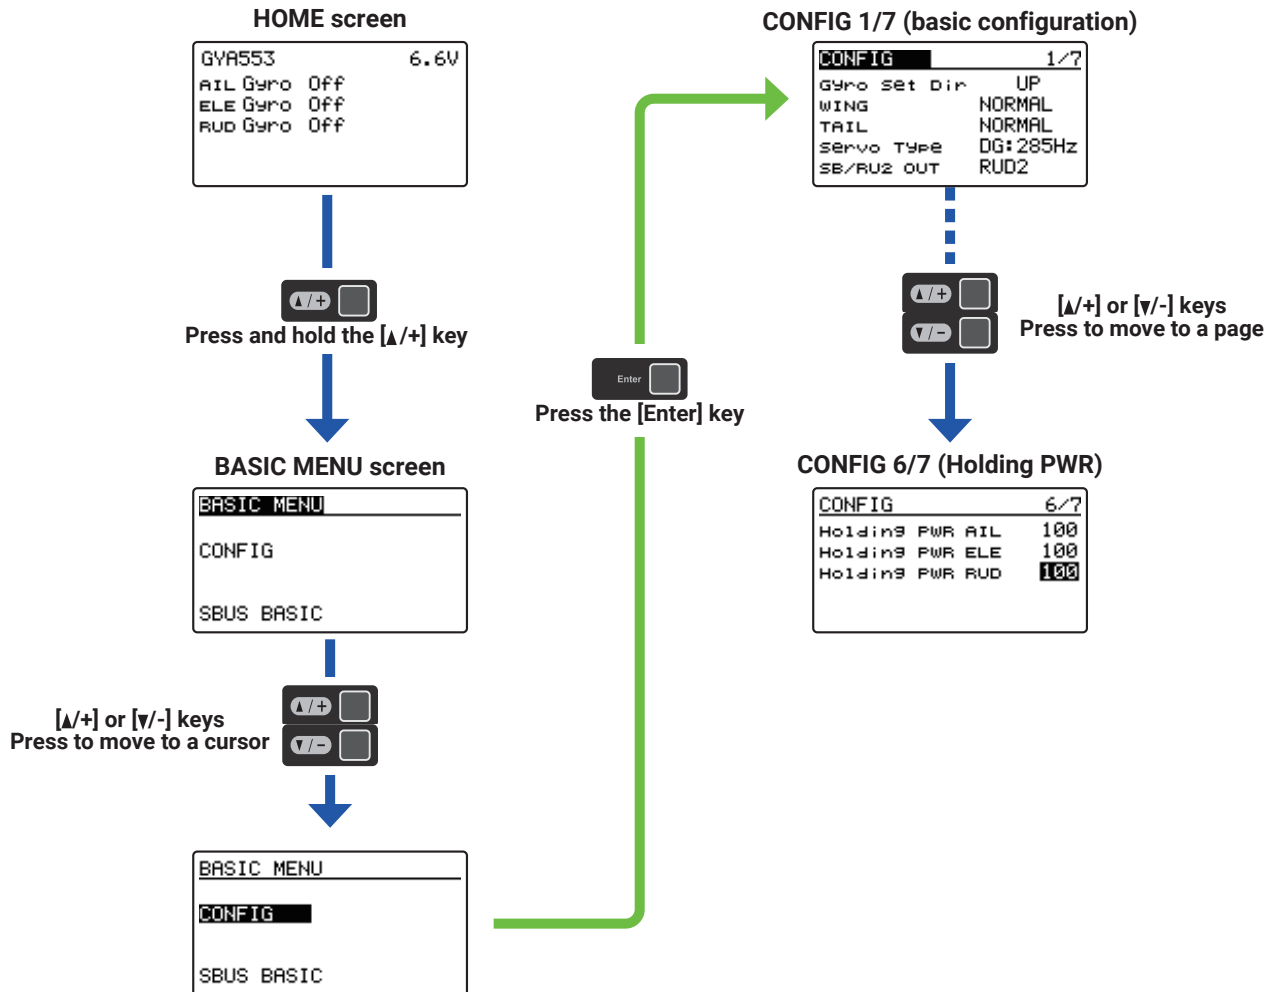

### CGY760R / 755 --- GOV Basic Menu 5/6 "Rev. Sensor" screen

Even if the "SBUS 2rpm out" setting is set to INH in the GOV basic menu 6/6 of the CGY760R / 755, the rotation speed sensor test is now possible on the "Rev. Sensor" screen.

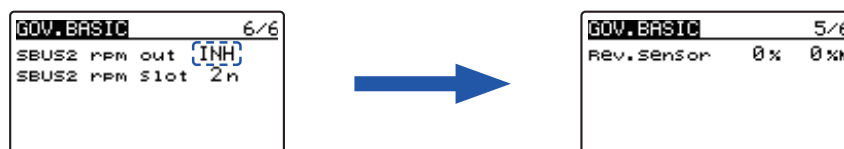




*Gyro Program Box*

# **GPB-1**

## **GYA553**

## **GYA573**

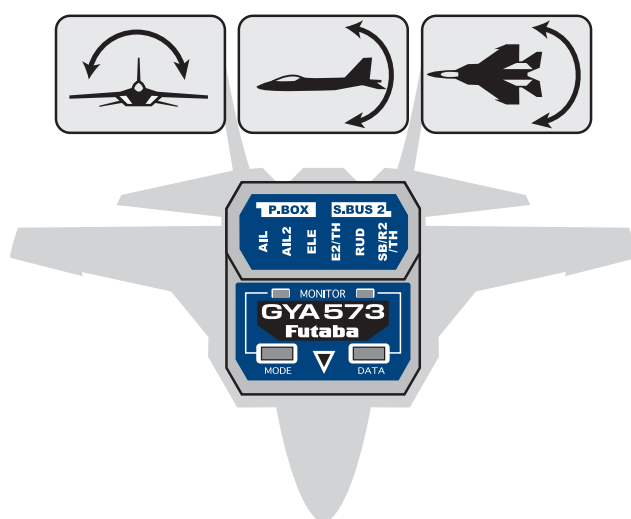


**GPB-1 for GYA553/573 (Ver.6.0 ~)**


**GYA553 Ver.3 ~ Ver.4**  
**GYA573**

**Setting manual**

\*GPB-1 for GYA553/573 (Ver.6.x) is for use only with GYA573, GYA553 Ver.3 and Ver.4.  
It cannot be used to configure helicopter gyros (CGY760R and CGY770R).

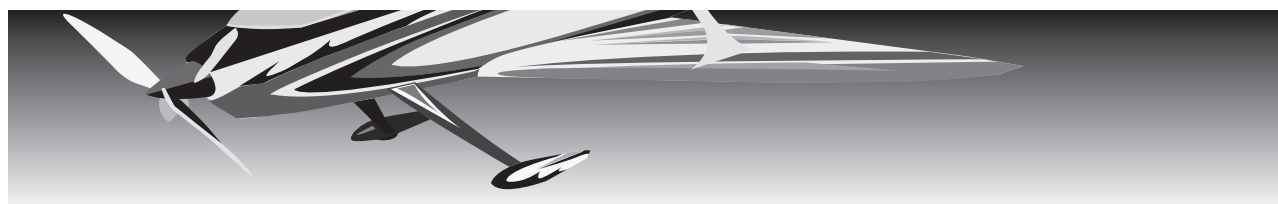


## Connection GPB-1 and GYA

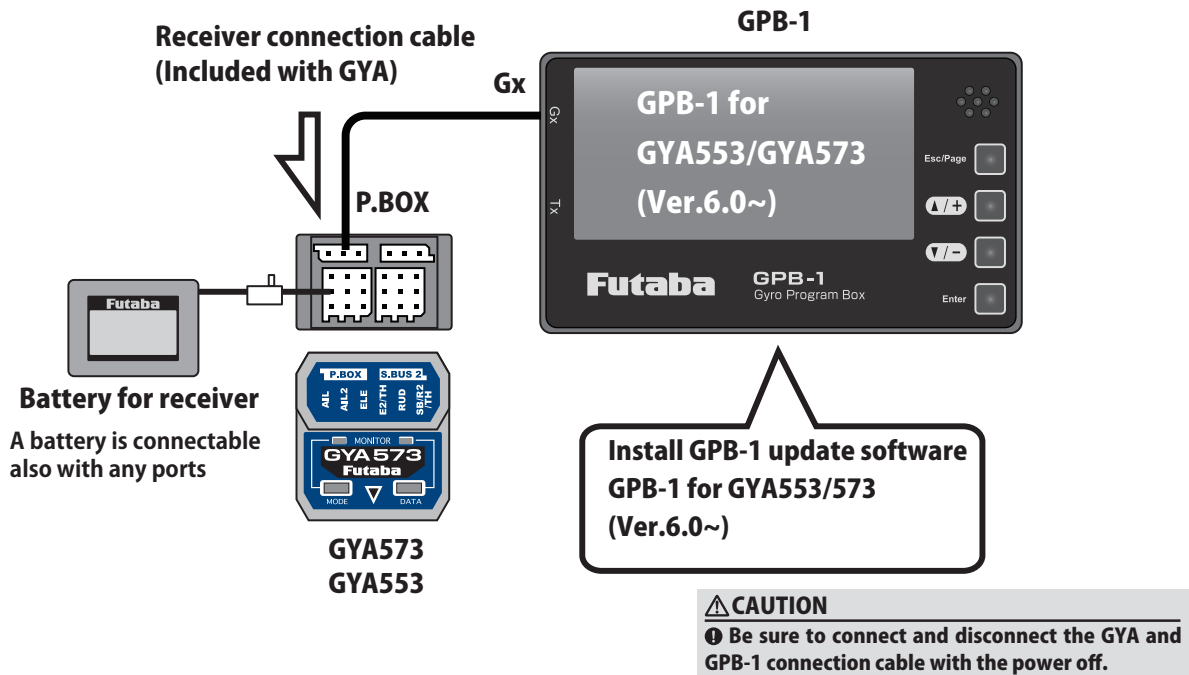

## How to operate each menu screen


Use the or key to move the cursor to the setting item on the screen and press the [Enter] key to enter the setting mode. or key to change the setting contents. When you are done, press [Enter] key to exit setting mode.

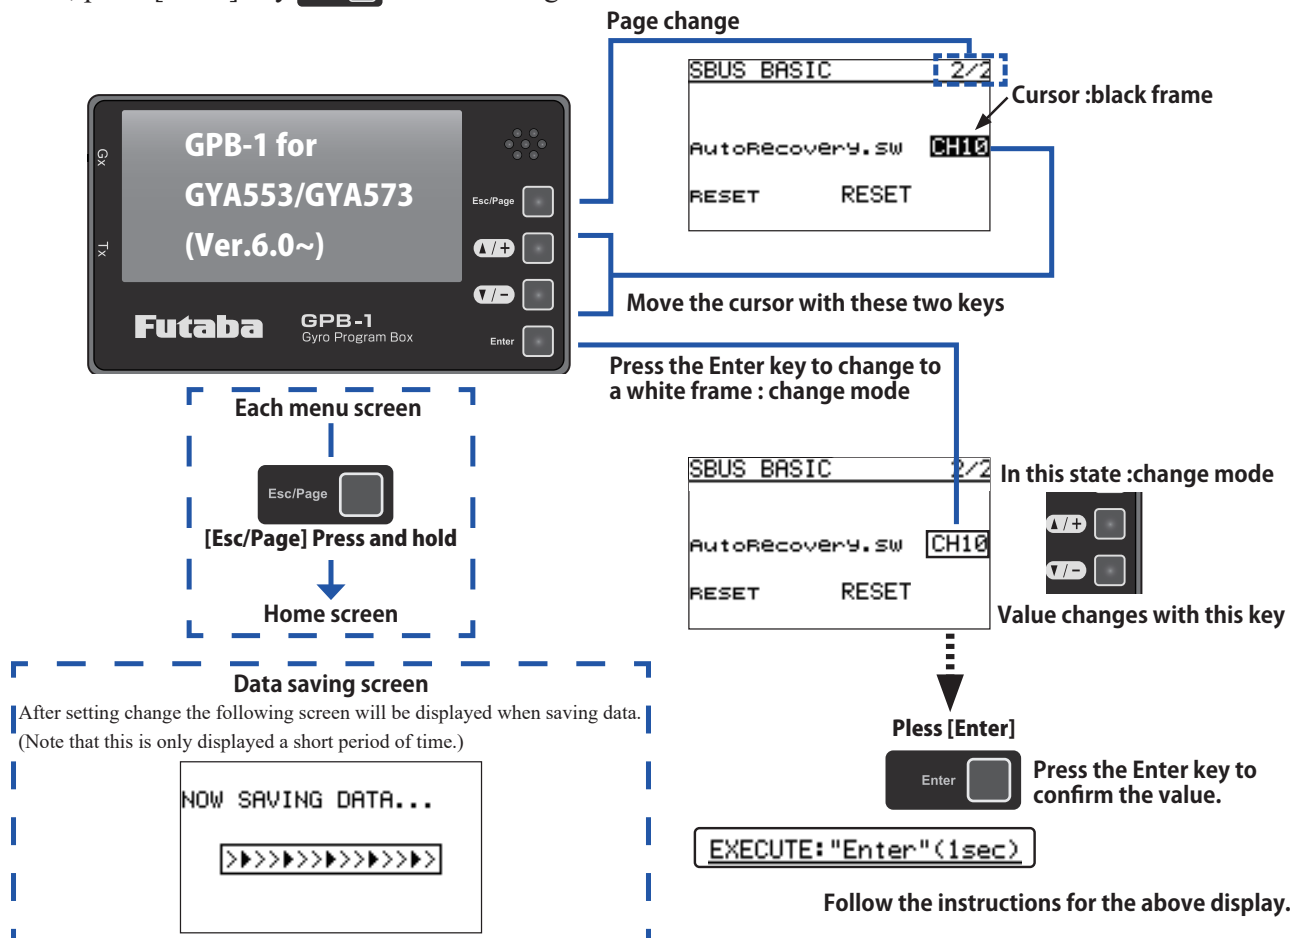




## Opening Screen

When GPB-1 starts up with power on, the opening screen is displayed first.

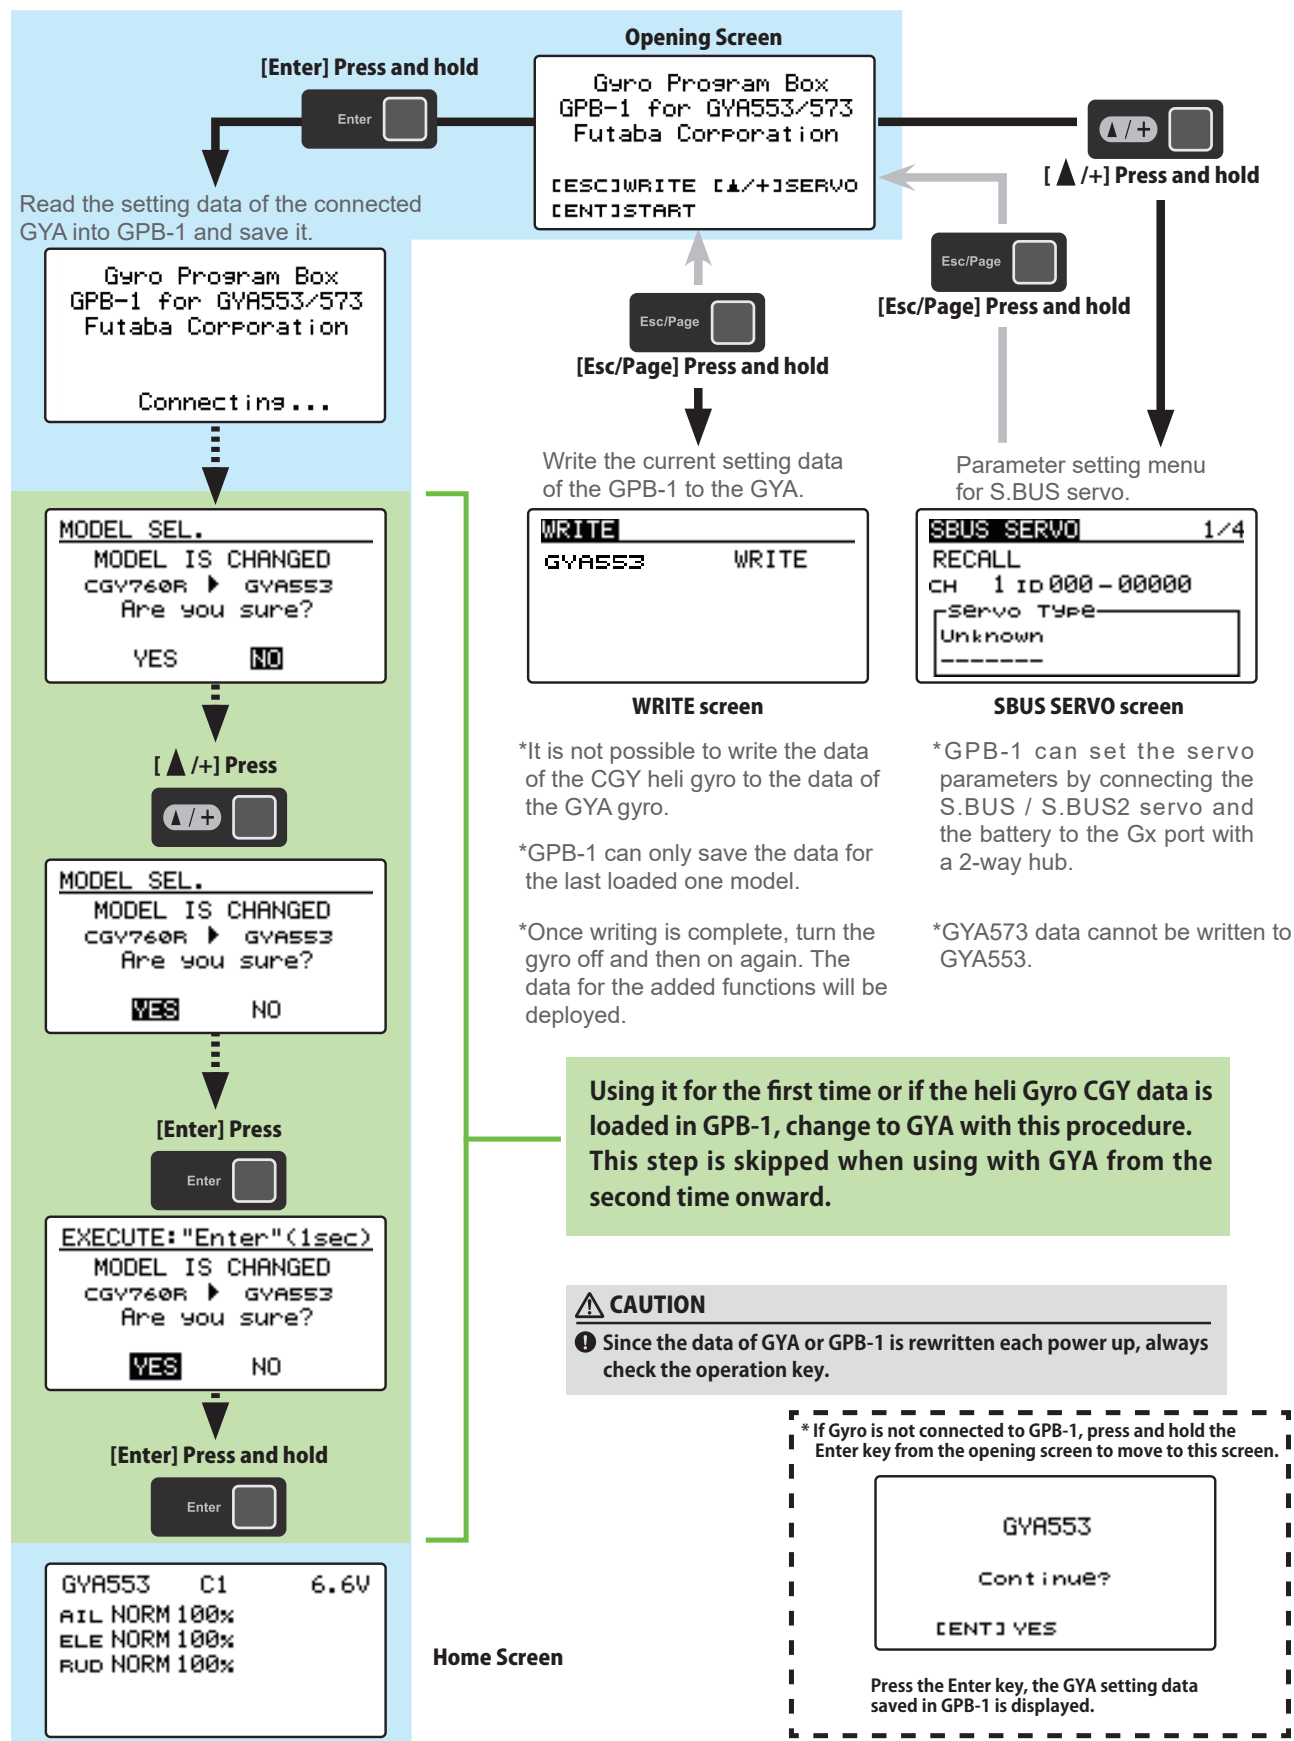

## Home screen

On the home screen, basic information such as gyro operation mode, sensitivity, battery voltage are displayed.

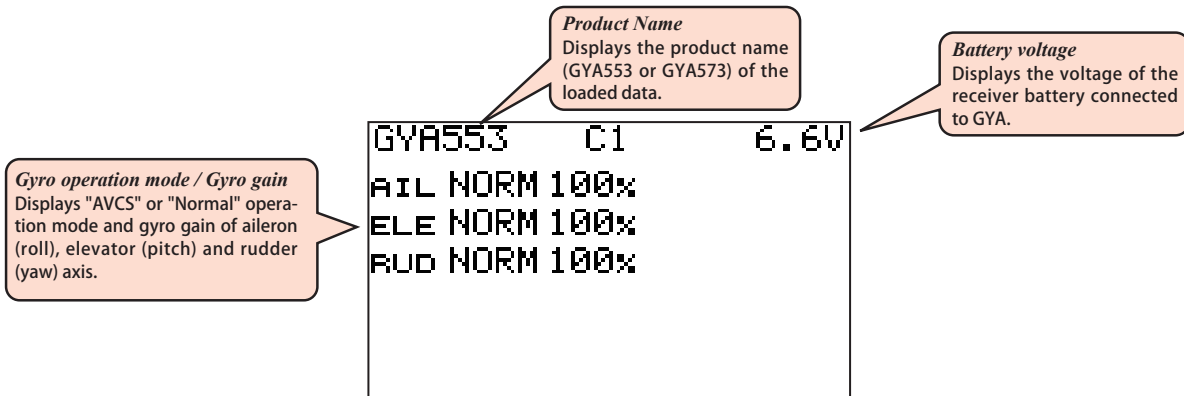

## Basic menu for GYA553

 
### Home screen

```
GYA553  C1  6.6V
AIL NORM 100%
ELE NORM 100%
RUD NORM 100%
```

[Esc/Page] Press and hold

### Basic menu

```
BASIC MENU
CONFIG
SBUS BASIC
```



### ◆ Config

```
CONFIG 1/9
Gyro set dir  UP
WING         NORMAL
TAIL         NORMAL
Servo Type   DG:285Hz
SB/RU2 OUT   S.BUS(HS)
```

[▲/+] Press and hold

[Esc/Page] Press and hold

### ◆ S.BUS basic

```
SBUS BASIC 1/4
AIL CH1  Gain AIL CH5
ELE CH2  Gain ELE CH7
          Gain RUD CH8
RUD CH4  EL2    CH9
AIL CH6  RD2    CH11
```

[Esc/Page] Press and hold

## Basic menu for GYA573

 
### Home screen

```
GYA573  C1  6.6V
AIL NORM 100%
ELE NORM 100%
RUD NORM 100%
```

Esc/Page   
[Esc/Page] Press and hold

### Basic menu

```
BASIC MENU
CONFIG
AIRBRAKE → P23
CAMBER MIX → P24
SBUS BASIC
```



Move the cursor



Press the  
Enter key

### ◆ Config

```
CONFIG 1/9
Gyro set Dir UP
WING NORMAL
TAIL NORMAL
Servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
```

[▲/+] Press and hold

Esc/Page   
[Esc/Page] Press and hold

### ◆ S.BUS basic

```
SBUS BASIC 1/4
AIL CH1 Gain AIL CH5
ELE CH2 Gain ELE CH7
          Gain RUD CH8
RUD CH4 EL2 CH9
AIL CH6 RD2 CH11
```


Esc/Page   
[Esc/Page] Press and hold

## Config 1/9 Gyro set mounting direction

```

CONFIG 1/9
Gyro set Dir UP
WING NORMAL
TAIL NORMAL
servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
    
```


Set the mounting direction of GYA. Set mounting direction with reference to figure below.

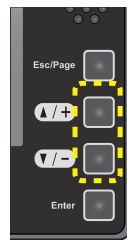

Move the cursor

```



CONFIG 1/9
Gyro set Dir UP
WING NORMAL
TAIL NORMAL
servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
    
```

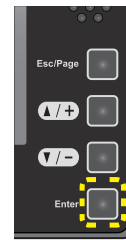

[Enter] key to enter setting mode

```

CONFIG 1/9
Gyro set Dir UP
WING NORMAL
TAIL NORMAL
servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
    
```

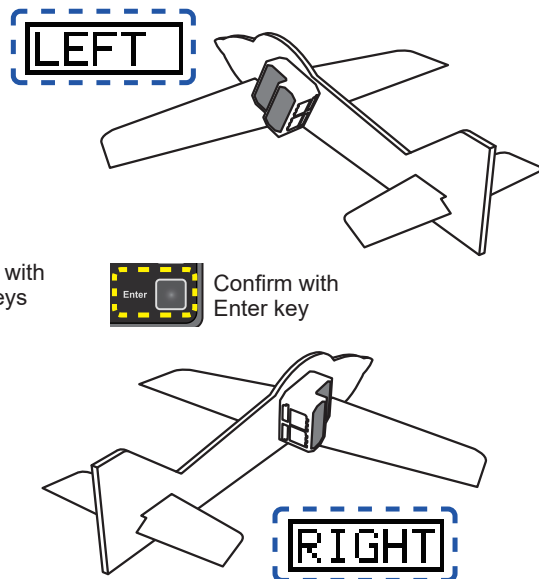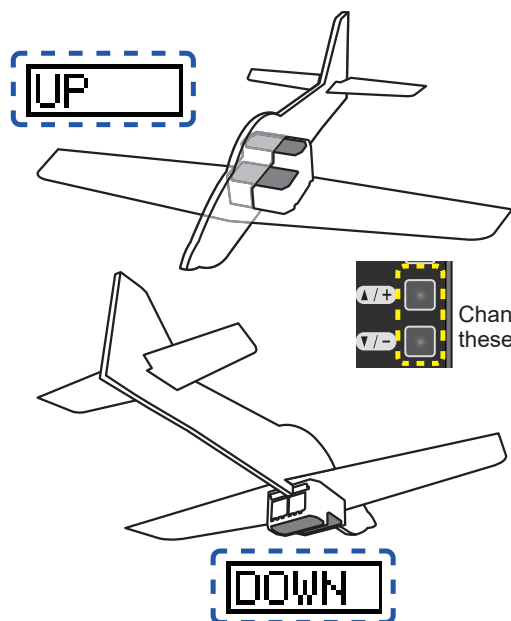


## Config 1/9 WING/TAIL

```

CONFIG 1/9
Gyro Set Dir UP
WING NORMAL
TAIL NORMAL
servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
    
```

Set with the wing type/tail type of GYA. The wing type/tail type of the transmitter is not used and is normal.


- Turn off the elevon / V-tail mixing on the transmitter side.
- Do not use transmitter sub-trim. Adjust using the gyro neutral offset.
- When using the S.BUS servo, you can also use the neutral offset function of the S.BUS servo setting parameters.

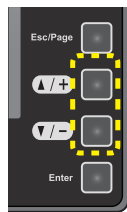

Move the cursor

```


CONFIG 1/9
Gyro Set Dir UP
WING NORMAL
TAIL NORMAL
servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
    
```

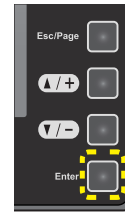


[Enter] key to enter setting mode

```

 
CONFIG 1/9
Gyro Set Dir UP
WING NORMAL
TAIL NORMAL
servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
    
```



Change with these keys

 

Confirm with Enter key

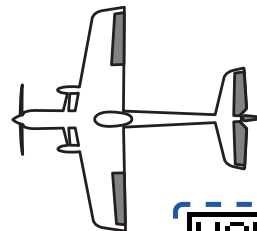



NORMAL

Select wing type

Select tail type

NORMAL

V-TAIL

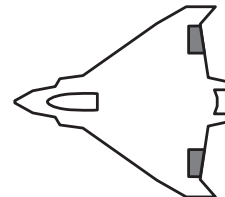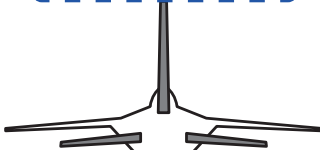

ELEVON

## Config 1/9 Servo type

```


CONFIG 1/9
Gyro Set Dir UP
WING NORMAL
TAIL NORMAL
servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
    
```

Select the servo type according to the servo to be used.

**Digital servo → DG : 285 Hz**


**Analog servo → AN : 70 Hz**

The stability of digital-servo mode of a flight increases in order to perform a high-speed control action.

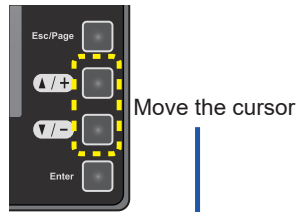

```

CONFIG 1/9
Gyro Set Dir UP
WING NORMAL
TAIL NORMAL
servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
    
```

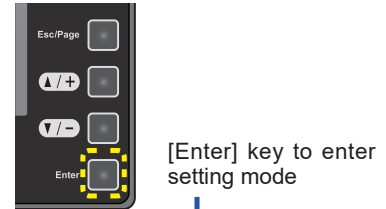


```

CONFIG 1/9
Gyro Set Dir UP
WING NORMAL
TAIL NORMAL
servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
    
```

servo Type

DG:285Hz

 Digital servo



Change with these keys



Confirm with Enter key

servo Type

AN: 70Hz


Analog servo

## Config

### Config 1/9 SB/R2 OUT

```

CONFIG 1/9
Gyro Set Dir UP
WING NORMAL
TAIL NORMAL
Servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
  
```

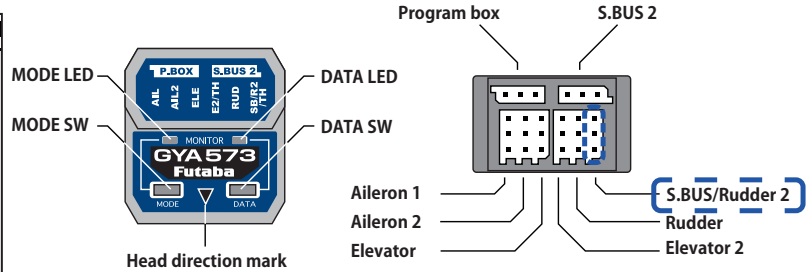

Select the SB / R2 port.

Move the cursor

```

 
CONFIG 1/9
Gyro Set Dir UP
WING NORMAL
TAIL NORMAL
Servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
  
```

[Enter] key to enter setting mode

```

CONFIG 1/9
Gyro Set Dir UP
WING NORMAL
TAIL NORMAL
Servo Type DG:285Hz
SB/RU2 OUT S.BUS(HS)
  
```

SB/RU2 OUT **S.BUS(HS)** S.BUS(HS) Connect SV servo




Change with these keys



Confirm with Enter key

SB/RU2 OUT **S.BUS(STD)** S.BUS(STD)

 If S3175HV, DLPH-1, etc. do not work with S.BUS(HS), use S.BUS(STD).



Change with these keys



Confirm with Enter key

SB/RU2 OUT **RUD2** Rudder 2



When using two rudder servos

SB/RU2 OUT **CH3(THR)** CH3(THR)

Use this port for throttle.

## Config

### Config 2/9 Gyro direction


It is the direction setting of the gyro. Be careful as it will crash if the direction is reversed.

For dual aileron, dual elevator, and dual rudder aircraft, check the operating direction of each second aileron/elevator/rudder.


CONFIG		2/9
Gyro Dir		
AIL NORMAL	AI2 NORMAL	
ELE NORMAL	EL2 NORMAL	
RUD NORMAL	RD2 NORMAL	
AI3 NORMAL	AI4 NORMAL	

Key operation → How to operate each menu screen


Turn the airplane to the right on the ground and check that the rudder operates to the left.

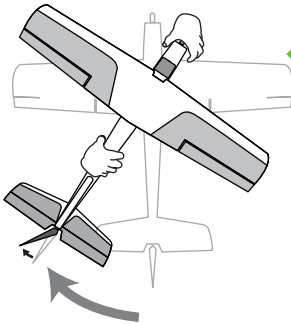


Raise the airplane with its nose upward and check that the elevator operates downward.

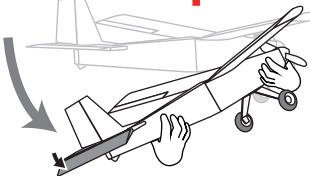

Tilt the airplane to the left on the ground and check that the ailerons operate to the right.

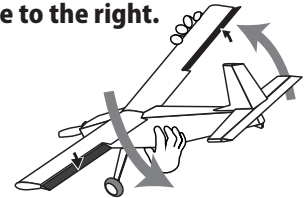

Tilt the airplane to the left on the ground and check that the 4-aileron operates to the right.

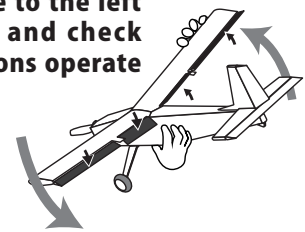


If the SB/R2 port output is set to "S.BUS(HS)" or "S.BUS(STD)", the setting menu will display AIL3 and AIL4 setting items.

\* AIL3 and AIL4 settings cannot be set with the button settings on the GYA main unit.

### Config 3/9 Neutral offset


Neutral position setting for each servo.

CONFIG		3/9
NEUTRAL OFFSET		
AIL +0	AI2 +0	
ELE +0	EL2 +0	
RUD +0	RD2 +0	
AI3 +0	AI4 +0	

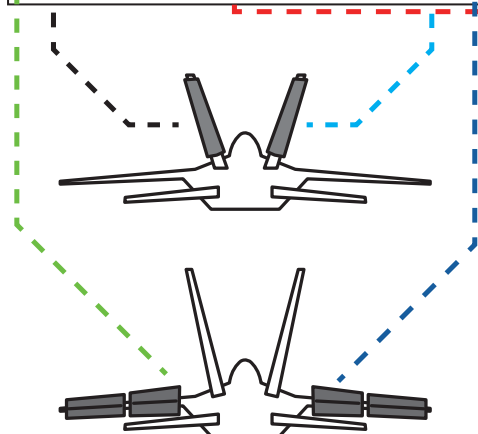


If the SB/R2 port output is set to "S.BUS(HS)" or "S.BUS(STD)", the setting menu will display AIL3 and AIL4 setting items.

\* AIL3 and AIL4 settings cannot be set with the button settings on the GYA553 main unit.

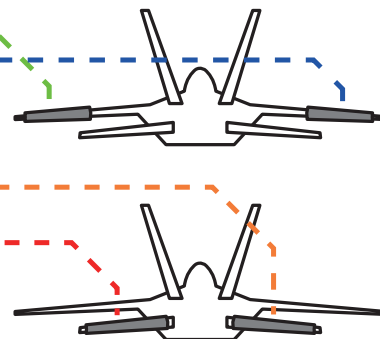

Key operation → How to operate each menu screen

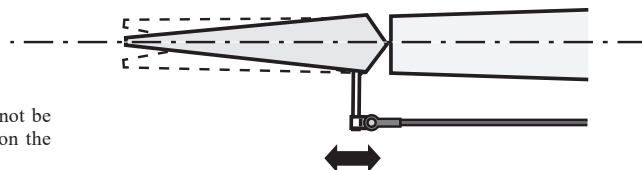

This will move the neutral to the desired position.



## Config 4/9 5/9 Servo limit

CONFIG	4/9
Srv.Limit	
AIL 100 %	100 %
ELE 100 %	100 %
RUD 100 %	100 %
AIL 100 %	100 %

CONFIG	5/9
Srv.Limit	
AIL2 100 %	100 %
EL2 100 %	100 %
RD2 100 %	100 %
AIL4 100 %	100 %


Key operation → How to operate each menu screen

If the SB/R2 port output is set to "S.BUS(HS)" or "S.BUS(STD)", the setting menu will display AIL3 and AIL4 setting items.


\* AIL3 and AIL4 settings cannot be set with the button settings on the GYA main unit.

This is the limit setting for each servo. The position of the maximum operation is read into the gyro in the first setting.


### Aileron example

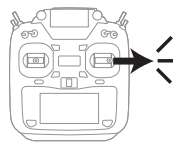


Stick to full right

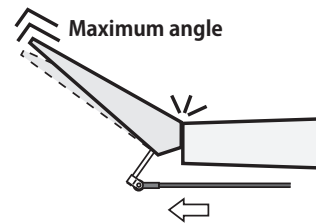

Adjust the value (%) to reach the maximum operating position

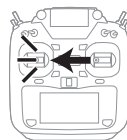

Stick to full left

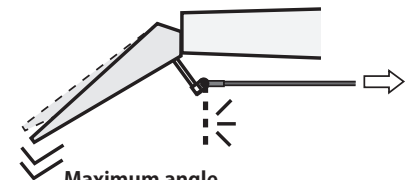

Adjust the value (%) to reach the maximum operating position



## Config 6/9 Holding Power

It is a function to adjust the posture holding force of the aircraft in AVCS mode. Decreasing the value weakens the holding power and makes the operation feeling closer to the normal mode.

The current rate numbers C1 to C5 are displayed by operating the channel of the transmitter.

Like the flight condition function of the transmitter, you can set up to 5 different data for the attitude holding force rate of the aircraft in AVCS mode by operating the switch from the transmitter, and switch between them. You can set the holding power rate selector switch to the channel with the AFR function of the transmitter, and set the point for each rate on the AFR point curve to switch. It is also possible to use the flight condition function to work with the flight condition switch.



### S.BUS Basic 2/3

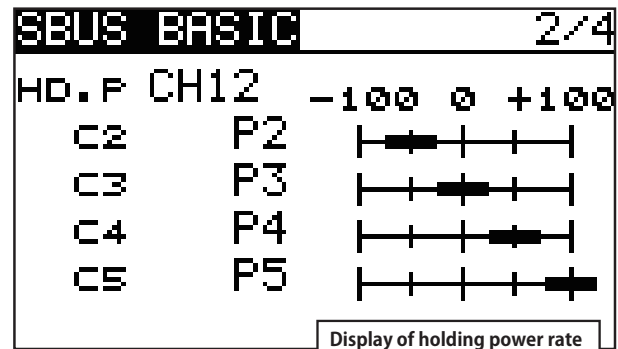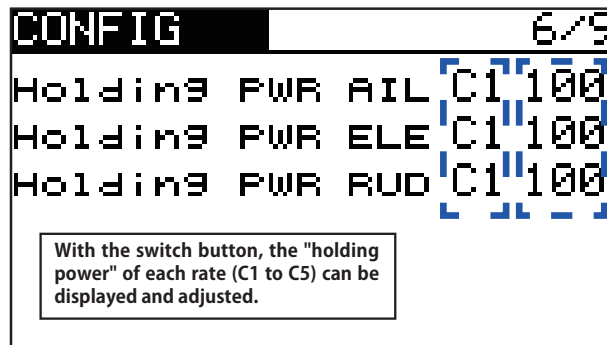



Key operation → How to operate each menu screen

Display and adjust the current rate numbers C1 to C5 by operating the channel on the transmitter.

 When set to SW of DG1 or DG2

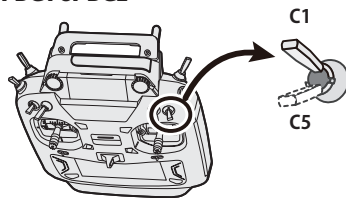

When set to dial or lever

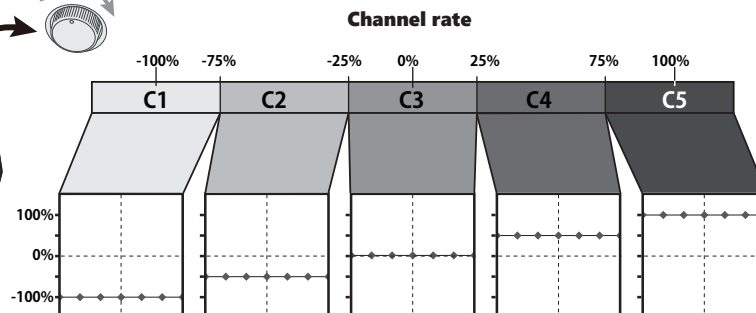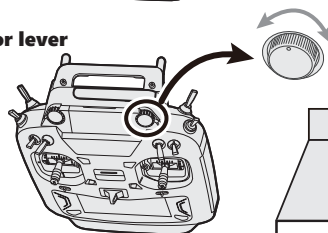

## Config 7/9 4D Flight (Backward flight) Gyro Reverse Mode Adjustment

Page 7 is for setting the gyro reverse mode. This is a special setting for 4D backward flight. Select whether to reverse the control direction of the aileron, elevator, and rudder when flying backward. Normally, when flying backward, the steering direction of all the rudder is reversed, so the control direction of the gyro is also reversed.

Switching between forward (FW) and reverse (BK) uses the same CH12 signal as the holding force. Up from near the midpoint of the throttle stick is forward, and down is reverse.

For details on setting the switching point, please refer to the transmitter settings.

In gyro reverse mode, the gyro controls in the same direction as the aircraft's tilt. Switch between forward and reverse to check that the gyro control direction changes correctly.

Config 7/9

CONFIG			7/9
4D Flight	AIL	INH	
4D Flight	ELE	INH	
4D Flight	RUD	INH	

S.BUS Basic 3/4

SBUS BASIC			3/4
4D	CH12	-100 0 +100	
BK		+ + + +	

## Config 8/9 4D Flight (Backward flight) Mode Adjustment

Page 8 is for setting the gyro reverse mode. This is a special setting for 4D backward flight.

The AET (BK) and AET (FW) functions estimate the aircraft's flight attitude during forward and backward transitions and optimize gyro control. If the aircraft's attitude changes quickly, decrease the value. If the attitude changes slowly, increase the value. The correction values for forward and backward transitions can be set independently. The setting range is 0 to 30. The OPC parameter adjusts the speed when the control amount increases and decreases. The setting range is 0 to 27. The values in the setting example are the standard setting values for SkyLeaf-ST. The optimal value will vary depending on the aircraft characteristics and flight style.

Config 8/9

CONFIG			8/9
4D Flight			
AET<BK>	12	AET<FW>	8
OPC	Inc 6	Dec	6
OPC ELE	Inc 6	Dec	6
OPC RUD	Inc 6	Dec	6

-----  
 | The setting screen will not be displayed on GYA553 ~Ver.3. |  
Setting is possible on GYA553 Ver.4~ or GYA573.

## Config 9/9 Reset

### Config 9/9

For GYA553

CONFIG	9/9
DATA RESET	RESET

Reset each Config item. It returns to the initial value.

For GYA573

CONFIG	9/9
ELE2 Port	ELE2
DATA RESET	RESET


For GYA573, the E2/TH port can be set to ELE2 output or CH3 (THR) output.

CONFIG	9/9
ELE2 Port	CH3(THR)
DATA RESET	RESET

\*For GYA573, air brake and camber mix settings will also be initialized.


## SBUS Basic menu

Set the CH for each function according to the transmitter to be used.  
Any unused functions should be set to INH (Inhibited).

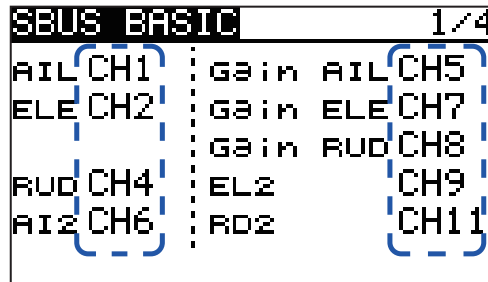


Move the cursor to each function to change the channel.

Key operation → How to operate each menu screen

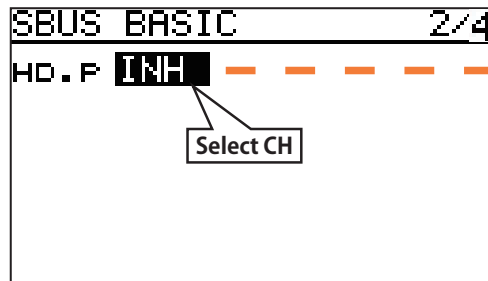

Key operation → How to operate each menu screen


Holding power rate display

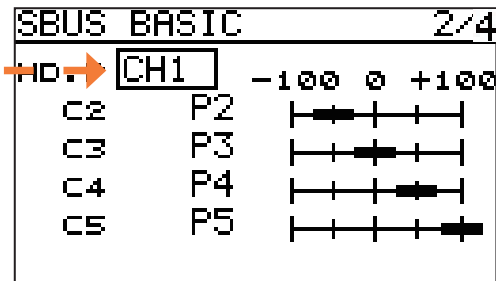

CH setting items for AIL3 and AIL4 are displayed on the final screen of the S.BUS basic setting screen. By setting the operation CH of AIL3 and AIL4, the gyro-controlled signal is output to the corresponding CH of the S.BUS output.



\* Match the operation CH and CH setting on the function setting screen on the transmitter side.

\*When the AIL3 and AIL4 CH settings are INH, the gyro control is not performed and the data sent from the transmitter is output as is.

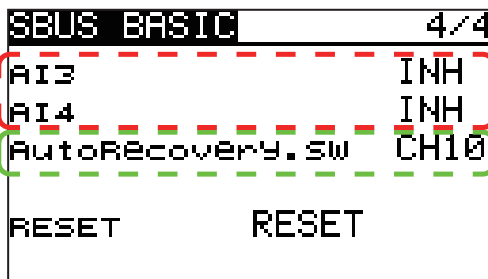

Key operation → How to operate each menu screen

ON-OFF channel for auto recovery.

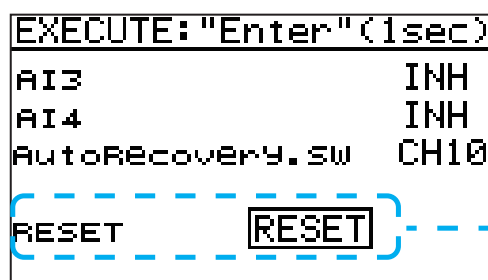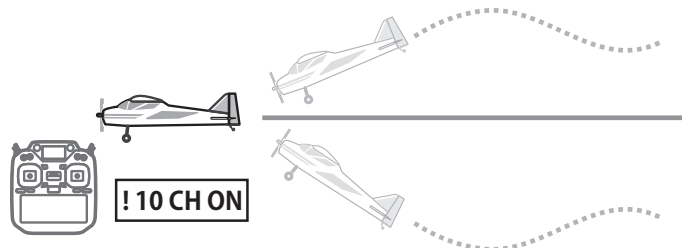

Reset each S.BUS function. It returns to the initial value.

1. Use the [▲/+] or [▼/-] key to move the cursor to the [RESET] on the screen and press the [Enter] key to enter the setting mode.
2. As shown on the left screen, [EXECUTE: "Enter" (1sec)] is displayed.
3. Press and hold the [Enter] key to reset.

For GYA573

SBUS BASIC		4/4
A13	INH	
A14	INH	
AutoRecovery.SW	CH10	
Roll Flat SW	INH	
RESET	RESET	

This is the channel setting for the switch that turns roll flat ON/OFF.

The roll angle at which roll flat turns ON can be set by the pulse width at the ON position.

(Set using the AFR rate on the transmitter for this setting CH, etc.)

## 【Roll Flat】

This function keeps only the roll axis horizontal (roll angle  $0^\circ$  ).


When used during landing approach, it keeps the roll axis horizontal, making aileron operation easier and allowing you to concentrate on throttle and elevator operation, making landing easier. It also maintains horizontality during inverted flight. The roll angle at which the roll flat function turns on should be set to  $10^\circ$  to  $15^\circ$  during landing, and  $15^\circ$  to  $20^\circ$  during normal flight, for a smooth flight.

Conditions for the roll flat function to be ON (when all of the following conditions are met)

- 1) Roll Flat Switch Channel is set (not INH)
- 2) When the roll flat switch channel is in the - position from neutral when viewed on the transmitter AFR setting screen.
- 3) When the roll flat switch channel operation position is viewed on the AFR setting screen of the transmitter, when the rate value is Wp (%), the roll angle of the aircraft is within Wp/2 (degrees).
- 4) When the aileron stick is in the neutral position.
- 5) When the aircraft pitch angle is  $\pm 60^\circ$  or less

**[EX.]** When the roll flat switch channel is CH15, if the operating position of CH15 is the AFR rate -50%, the roll angle at which the roll flat function will be turned ON will be within  $\pm 25^\circ$

When the Roll Flat Switch Channel is set to an AFR rate of -100% or less, the auto recovery mode operates.

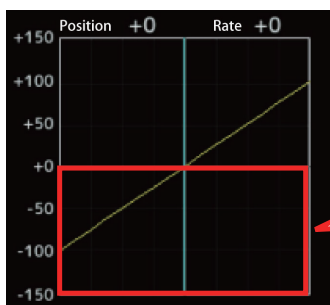

When the roll flat switch channel is in the - rate side from neutral, the roll flat function becomes ACT.

The roll angle at which roll flat is ON is 1/2 the AFR rate of the roll flat switch channel operating position.

**[EX.]** When the AFR rate of the roll flat switch channel operating position is -50%, if the roll angle is within  $\pm 25^\circ$  , the roll flat function is ON.

SBUS BASIC		4/4
A13	INH	
A14	INH	
AutoRecovery.SW	CH10	
Roll Flat SW	INH	
RESET	RESET	

Reset the S.BUS basic items.  
After execution, the items will return to the factory default values.

Move the cursor to "Reset" and press the Enter key. Press and hold the Enter key for one second while in the screen on the left to reset to the initial value.

## Air Brake

This function is the same as the air brake function of the transmitter. Two rates, A1 and A2, can be set. (The amount of operation is slightly less than that of the air brake function of the transmitter. It can also be used in AVCS mode where the air brake function of the transmitter cannot be used.)

Roll Flat function works even when the air brake is on.

```

AIRBRAKE 1/2
A1
AIL  AIL  AIL  AIL
(+0  +0  +0  +0)
ELE  ELE
(+0  +0)
  
```

### Air brake mix rate No. display

The air brake can be set to two rates: A1 and A2.

Operation rate (-250 ~ 0 ~ +250)

```

AIRBRAKE 1/2
A2
AIL  AIL  AIL  AIL
+0   +0   +0   +0
ELE  ELE
+0   +0
  
```

```

AIRBRAKE 2/2
A1
SPEED      IN      OUT
AIL        0        0
ELE        0        0
AIRBRAKE SW  INH
  
```

### Setting the operating speed of each servo

Setting range : 0 ~ 27

IN is the operating speed when the air brake mix is turned ON.

OUT is the speed when the air brake mix is turned OFF.

When switching between A1 ⇔ A2, the speed setting of the one that is turned ON (IN side) takes priority.

```


AIRBRAKE 2/2
A1
SPEED      IN      OUT
AIL        0        0
ELE        0        0
AIRBRAKE SW  CH14
  
```

### Air brake Mix ON/OFF CH setting

Setting range: INH, CH1-CH16, DG1, DG2

A1 and A2 rates change with the pulse width of the same CH

Set with AFR on the transmitter

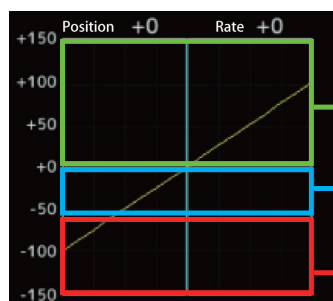

A1 and A2 are in the OFF region (neutral to +rate side)

Area where A1 is ON and A2 is OFF ((neutral to -50% side)

Area where A1 is OFF and A2 is ON (-50% or less)

## Camber mixing

This function is equivalent to the camber mixing function of the transmitter.

It can also be used in AVCS mode where the transmitter's camber mixing function cannot be used.

CAMBER MIX				
ACT	INH	sw		RATE
MASTER	INH			AIL
SPEED	IN	OUT		
AIL	0	0		ELE
ELE	0	0		

### Camber Mix ON/OFF setting

[Display]

INH : INH

OFF : Camber Mix is ACT, but Master CH is not set


ON : Camber Mix is set to ACT and the master channel is also set, but the ON/OFF channel is not set (Mixing is active).

ACT : Camber Mix is set to ACT with both the master channel and the ON/OFF channel set.

### Camber Mix operation speed setting (0 to 27)

Mixing OFF ⇒ When ON or when the master CH is operated while ON, it operates at the IN side rate.

Mixing ON ⇒ When OFF, it operates at the OUT side rate

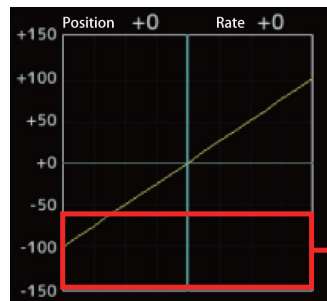

Area where camber switch is ON  
(-50% or less)

CAMBER MIX				
ACT ON	sw	INH		RATE
MASTER	CH16			AIL
SPEED	IN	OUT		
AIL	0	0		ELE
ELE	0	0		

### Camber Mix ON/OFF CH setting

Range : INH, CH1-CH16, DG1, DG2

CAMBER MIX				
ACT ACT	sw	CH15		RATE
MASTER	CH16			AIL
SPEED	IN	OUT		
AIL	0	0		ELE
ELE	0	0		

AIL setting screen transition button

CMB (AIL)			
	RATE1	RATE2	ACT
AIL	+0%	+0%	
AI2	+0%	+0%	
AI3	+0%	+0%	
AI4	+0%	+0%	

AIL Operation Rate (-100 ~ 0 ~ +100)  
Up and down sides can be set separately

CAMBER MIX				
ACT ACT	sw	CH15		RATE
MASTER	CH16			AIL
SPEED	IN	OUT		
AIL	0	0		ELE
ELE	0	0		

ELE setting screen transition button

CMB (ELE)			
	RATE1	RATE2	ACT
ELE	+0%	+0%	
EL2	+0%	+0%	

ELE Operation Rate (-100 ~ 0 ~ +100)  
Up and down sides can be set separately