

Your Futaba update compatible servo programming can be updated easily online. When functions are improved, the update file can be downloaded from our website.

For more information, check out web site for FAQ regarding updating this product.

*The display screen is an example. The screen depends on the PC.


When using CIU-3 : Required for update

CIU-3
*CIU-2 cannot be used.



Hub
(PC-LINK adapter)

Battery for receiver

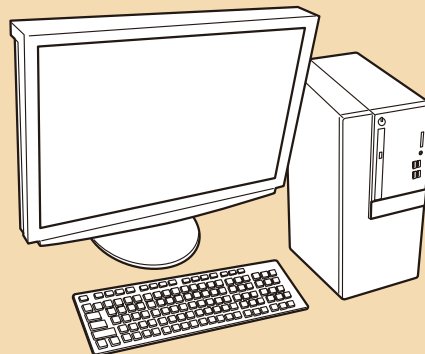


PC
(Access is possible by the web)

When using T16IZS(V12.0~), T16IZ(V10.0~), T26SZ(PRO)(V7.0~): Required for update




microSD

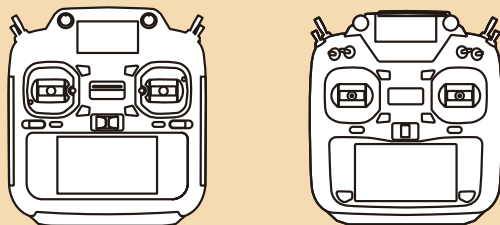

**T26SZ(PRO) (V7.0~) or
T16IZS(V12.0~) or T16IZ(V10.0~)**



**Female-Female type
cable**

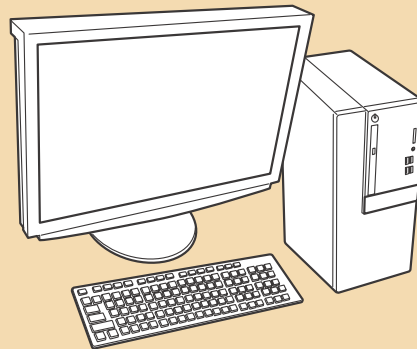


PC
(Access is possible by the web)

When using CIU-3 : Update Procedure

Preparations

1. Install the driver for the CIU-3 onto your PC.

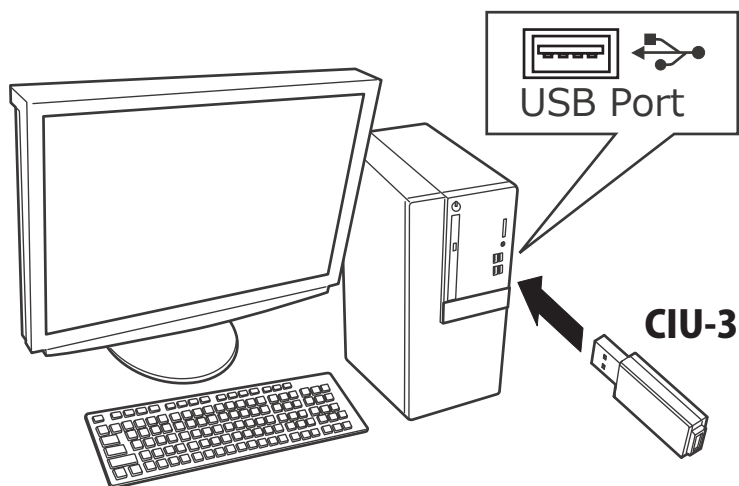


- ◆ When the **CIU-3** is first connected to the PC, once the CIU-3 is connected to the PC, download the recommended driver software Using Windows Vista, the "Found New Hardware Wizard" window appears on the screen. Click "Locate and install driver software".
- ◆ Refer to the manual of the CIU-3 for further information.

Updating procedure


1. Download the zip file of the update data from our website or your local distributor's website.

<https://www.rc.futaba.co.jp/>


<https://futabausa.com>

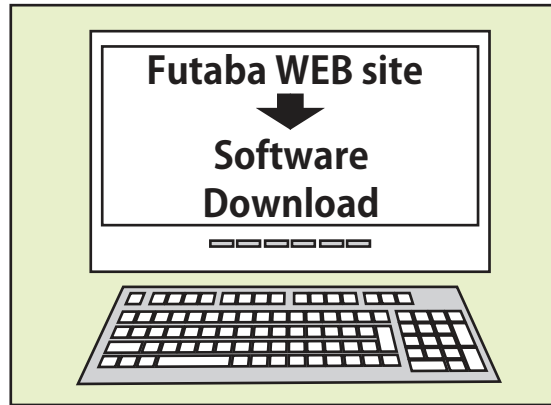


2. Extract the zip file on your computer.

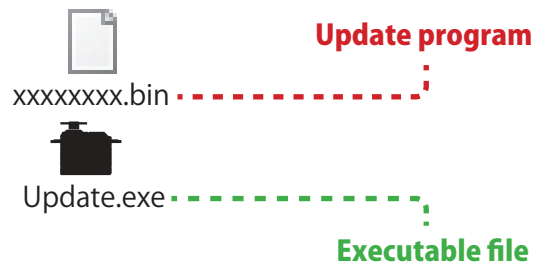

3. Connect as shown in the figure.

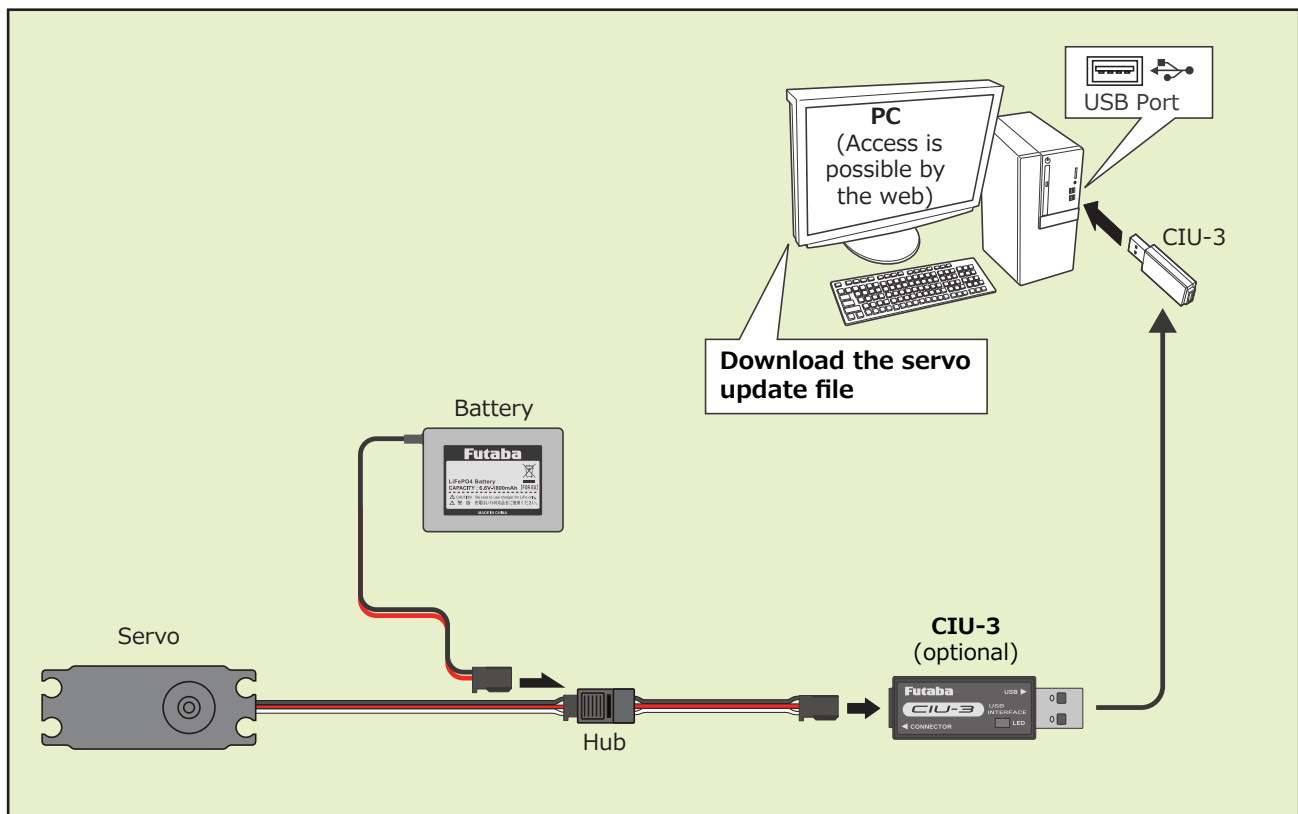


4. Operate the PC update.

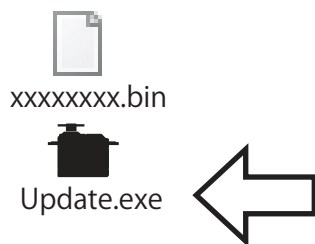


Be sure to update using the update file for the corresponding servo.
Do not use update files for different servos!

5. Click "WRITE".

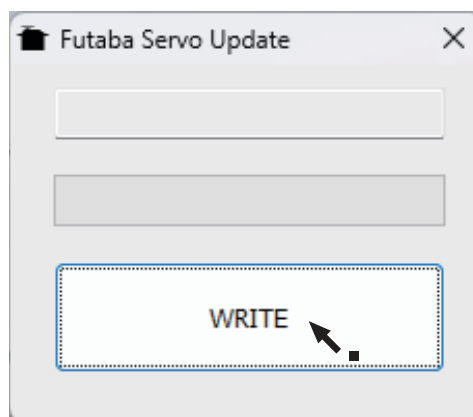

Write

6. Click "OK".

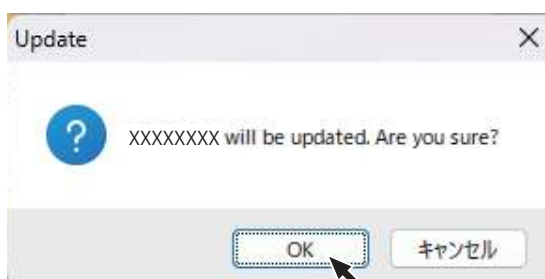

OK

7. The servo will beep twice and the update will begin.


Beep! Beep!

2 beeps



Wait for about 10 seconds.

Don't turn off the power !

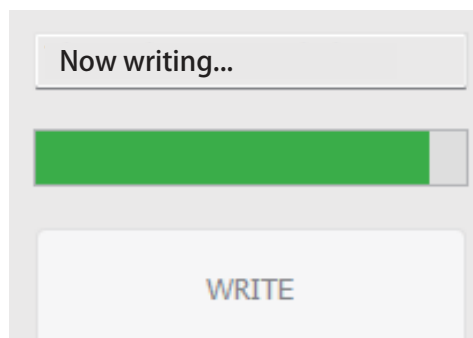

8. Update is complete when 3 beeps.


Beep! Beep! Beep!

3 beeps



9. This completes the update process.

Click "OK" and then remove the cable.

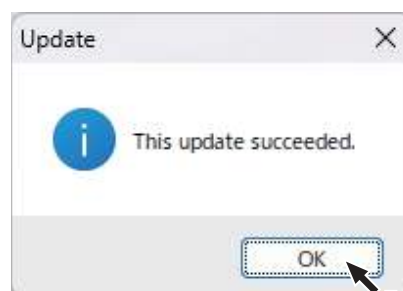

10. Be sure to check the each function before use.


T16IZS(V12.0~), T16IZ(V10.0~), T26SZ(PRO)(V7.0~): Update Procedure

Preparations

1. Download the zip file of the servo update data from our website or your local distributor's website.

<https://www.rc.futaba.co.jp/>

<https://futabausa.com>




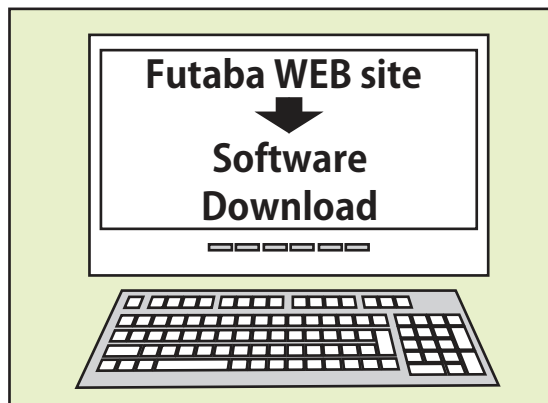


2. Extract the zip file on your computer.


3. Copy the "FUTABA" folder into your microSD card.




4. Insert the microSD card with "FUTABA" folder that contained the update software into the SD card slot on your transmitter.

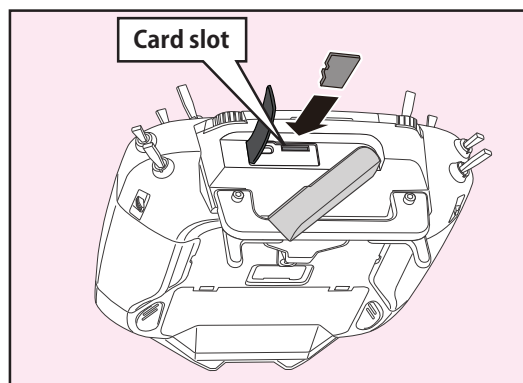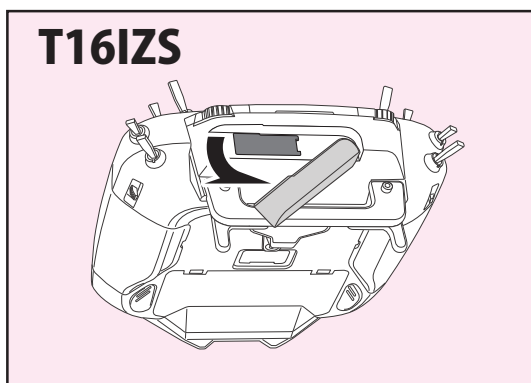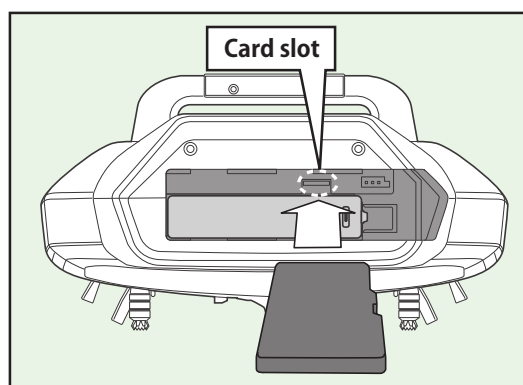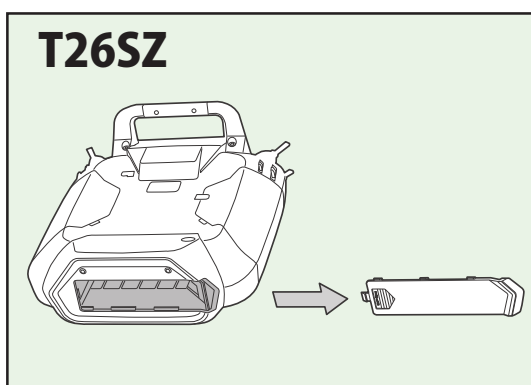

5. Connect the servo to be updated to the S.I/F connector of the transmitter.

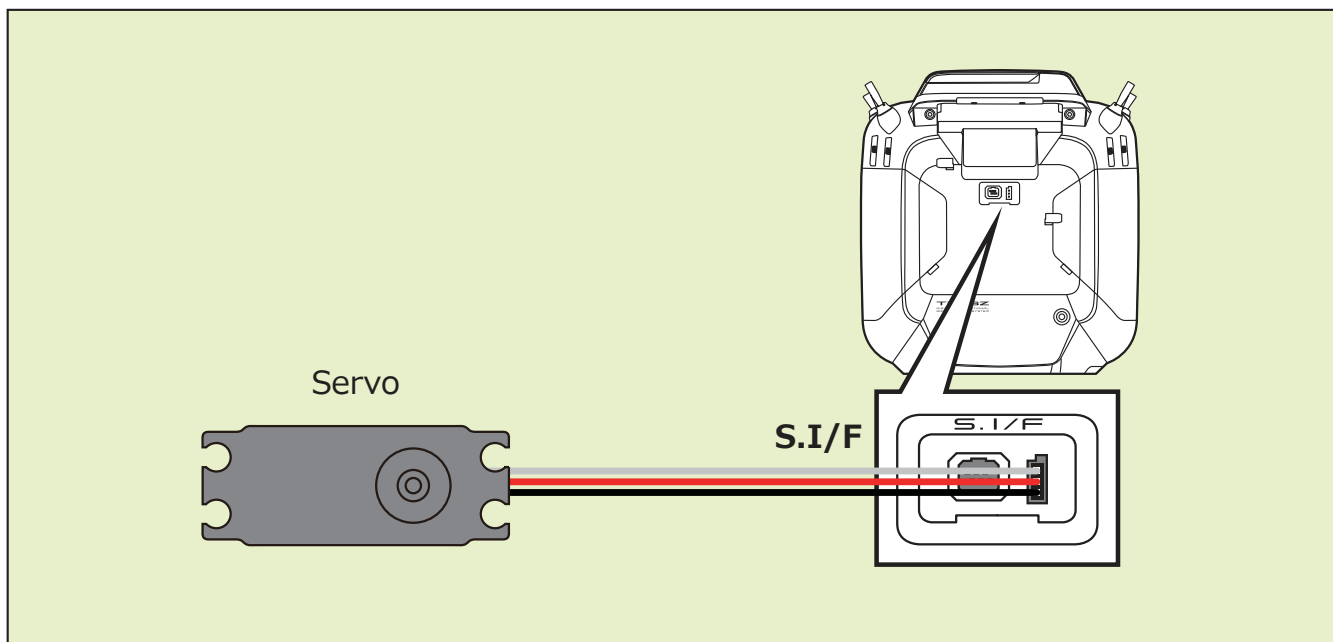


6. Turn on the transmitter and call "System Menu" ⇒ "Update".

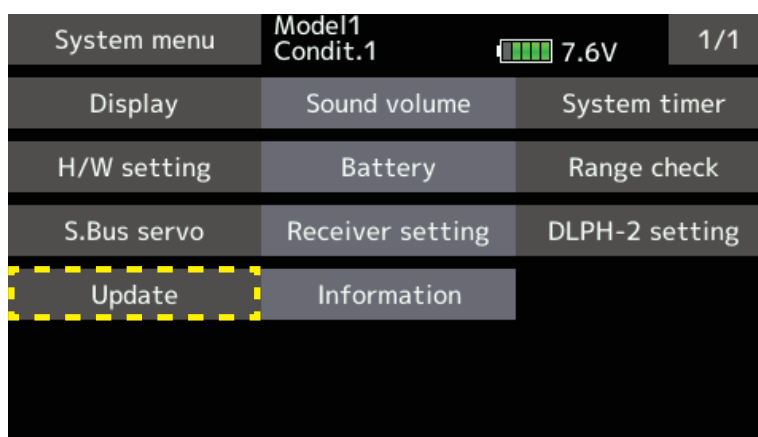


*The display screen will vary depending on the transmitter.


7. Tap [Servo update]

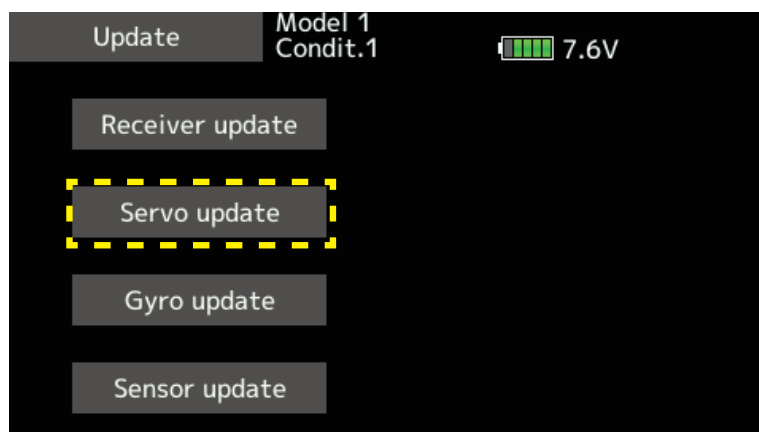



8. Tap the servo you want to update.

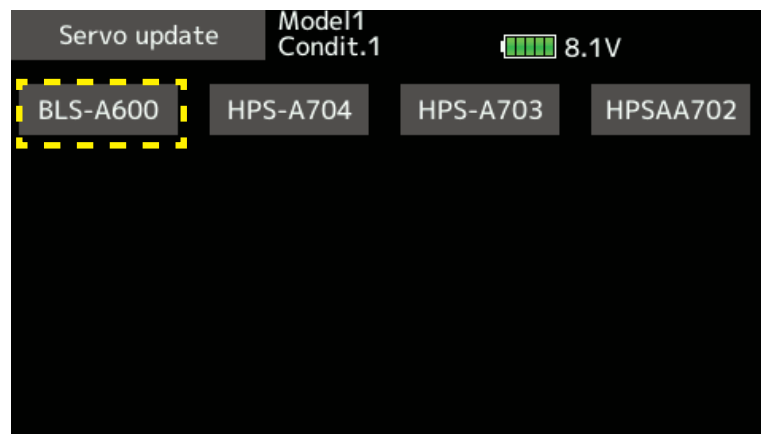


9. Tap [Update]

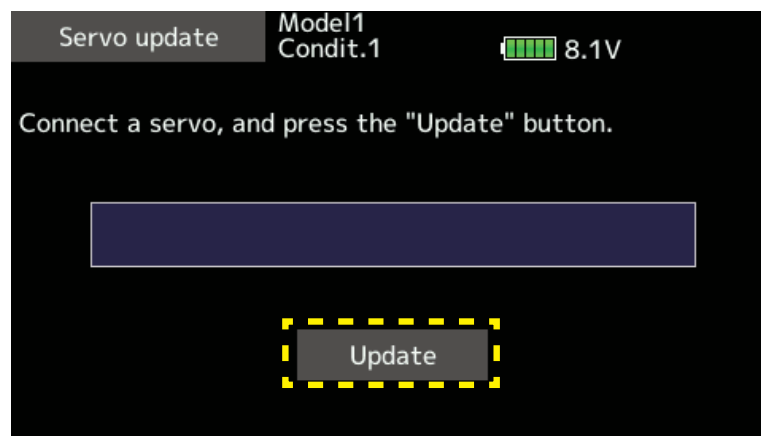

10. The servo will beep twice and the update will begin.

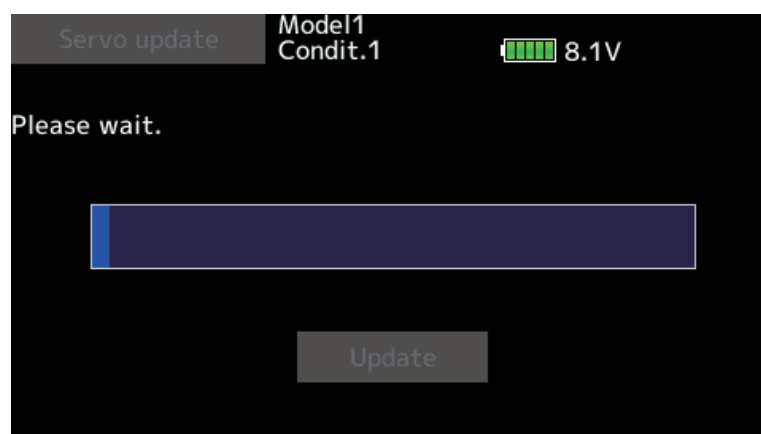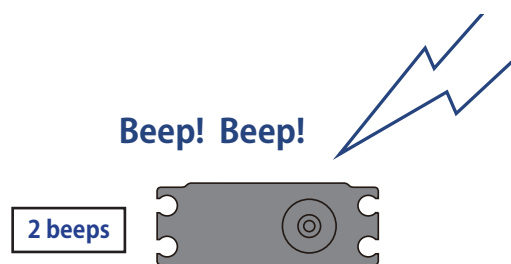

11. When finished, the following will appear.

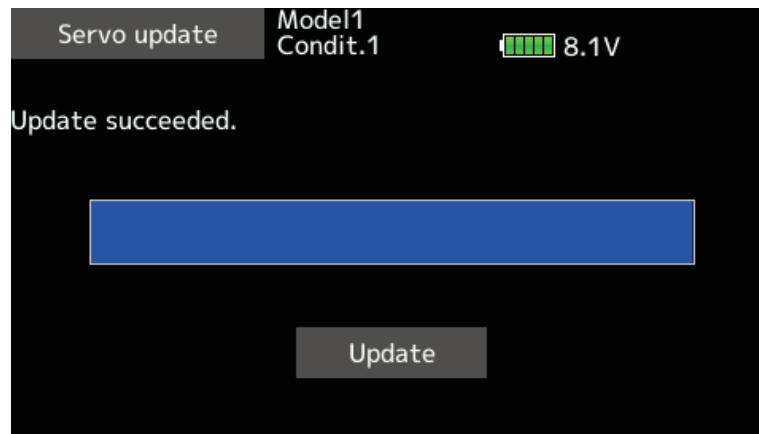

12. Disconnect the servo from the transmitter's S.I/F connector.

Always perform a function check before flying.

BLS-A600 V2.0 UPDATE

1. Improved operational stability when connected via S.BUS.
2. When using an airplane gyro with an S.BUS connection, the following settings are now available:
 - GYA483: Gyro mode = 3-axis
 - Servo type = DG285Hz mode
 - GYA553/GYA573: S.BUS (HS) mode

HPS-A* V3.0 UPDATE**

1. Improved operational stability when connected via S.BUS.