


# Futaba R2004GF

**FHSS-2.4GHz system,  
4-channel receiver**



Thank you for purchasing the R2004GF receiver. This receiver is designed for use with the Futaba FHSS system transmitter. Please pay special attention to the information contained within this manual

and transmitter's manual in order to have a pleasant running/flying experience. The R2004GF is compatible with the FHSS system transmitters as shown "Transmitter and Receiver Compatibility".

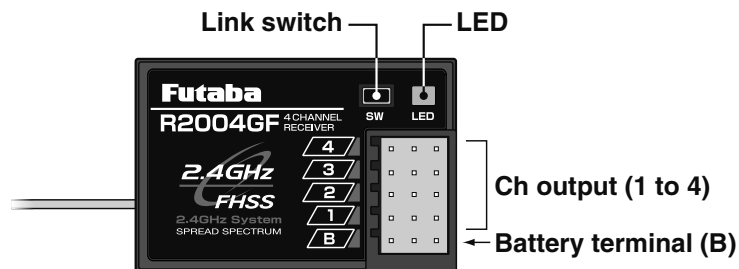

## R2004GF Specifications:

(FHSS system, 4-channel receiver)

- Receiving on 2.4GHz band
- Power requirement: 4.8V or 6V (shared with servo)
- Current drain: 30mA (at no signal)
- Size: 1.54x1.02x0.39" (39x26x10mm)
- Weight: 0.28oz. (8g)

## ⚠WARNING

- ⊘ **NEVER** use dry batteries for the power supply of the R2004GF as they may cause difficulties.

## Link Procedure

Each transmitter has an individually assigned, unique ID code. In order to start operation, the receiver must be linked with the ID code of the transmitter with which it is being paired. Once the link is made, the ID code is stored in the receiver and no further linking is necessary unless the receiver is to be used with another transmitter.

- 1 Place the transmitter and the receiver close to each other within one (1) meter
- 2 Turn on the transmitter and the receiver.
- 3 Push and hold the Link switch on the receiver.
- 4 When the link is complete, the LED on the receiver changes to solid green.

\* Please refer to the table below for LED status and receiver condition.

No signal reception	Red : On
Receiving signals	Green: On
Receiving signals, but ID is unmatched.	Green: Blink

\* If there are many FHSS systems turned on around your receiver, it might not link to your transmitter. In this case, even if the receiver's LED stays solid green, unfortunately the receiver might have established a link to one of the other transmitters. This is very dangerous if you do not notice this situation. In order to avoid the problem, we strongly recommend you to double-check whether your receiver is controlled by your transmitter by giving throttle input, etc. and then checking servo response.

## ⚠WARNING

- ⓘ After the linking is done, please cycle receiver power and check if the receiver to be linked is really under the control by the transmitter to be linked.
- ⊘ Do not perform the linking procedure with motor's main wire connected or with the engine operating as it may result in serious injury.

## FHSS-2.4GHz/S-FHSS-2.4GHz System Transmitter and Receiver Compatibility

Transmitter		FHSS Receiver		S-FHSS/FHSS Receiver	
		R603GF	R2004GF	R2104GF	
T2PL-2.4G (FHSS)		Okay	Okay	Okay	F/S function: Ch2
T3PL-2.4G (FHSS)		Okay	Okay	Okay	F/S function: Ch2
T4YF-2.4G (FHSS)		Okay	Okay	Okay	
T4PL-2.4G	S-FHSS	High Speed	—	Okay	F/S function: All channels B-F/S function: Ch2 *Digital servo only at High Speed mode
		Normal			
	FHSS		Okay	Okay	Okay

**NOTE:** Futaba FHSS/S-FHSS system and FASST system are not compatible each other.

## Compliance Information Statement (for U.S.A.)

This device, trade name Futaba Corporation of America, model number R2004GF, complies with part15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesiredoperation.

The responsible party of this device compliance is:

FUTABA Corporation of America  
2681 Wall Triana Hwy Huntsville, AL 35824, U.S.A.  
Phone:1-256-461-9399 FAX:1-256-461-1059 E-mail: service@futabaUSA.com

FUTABA CORPORATION

1080 Yabutsuka, Chosei-mura, Chosei-gun, Chiba-ken, 299-4395, Japan  
Phone: +81 475 32 6982, Facsimile: +81 475 32 6983

1M23N17436

©FUTABA CORPORATION 2018, 5 (3)