





T16IZ

T16IZ

SUPER

GYA553

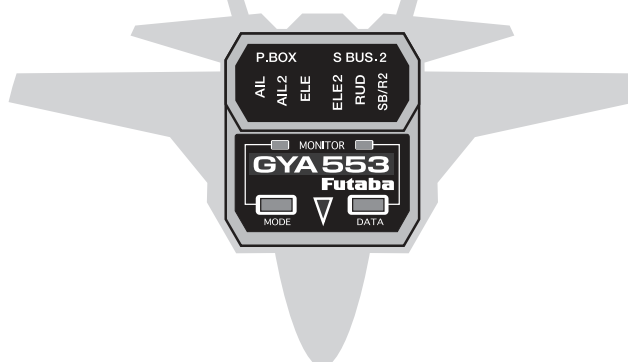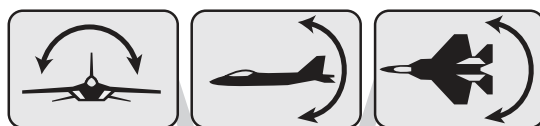

T16IZ/T16IZ SUPER

GYA553 Ver.3

Setting manual


Futaba

1M23Z07717




By installing the latest software on the T16IZ/T16IZ SUPER, you can setting the airplane gyro GYA553 on the T16IZ/T16IZ SUPER.

Connection T16IZ/T16IZ SUPER and GYA553

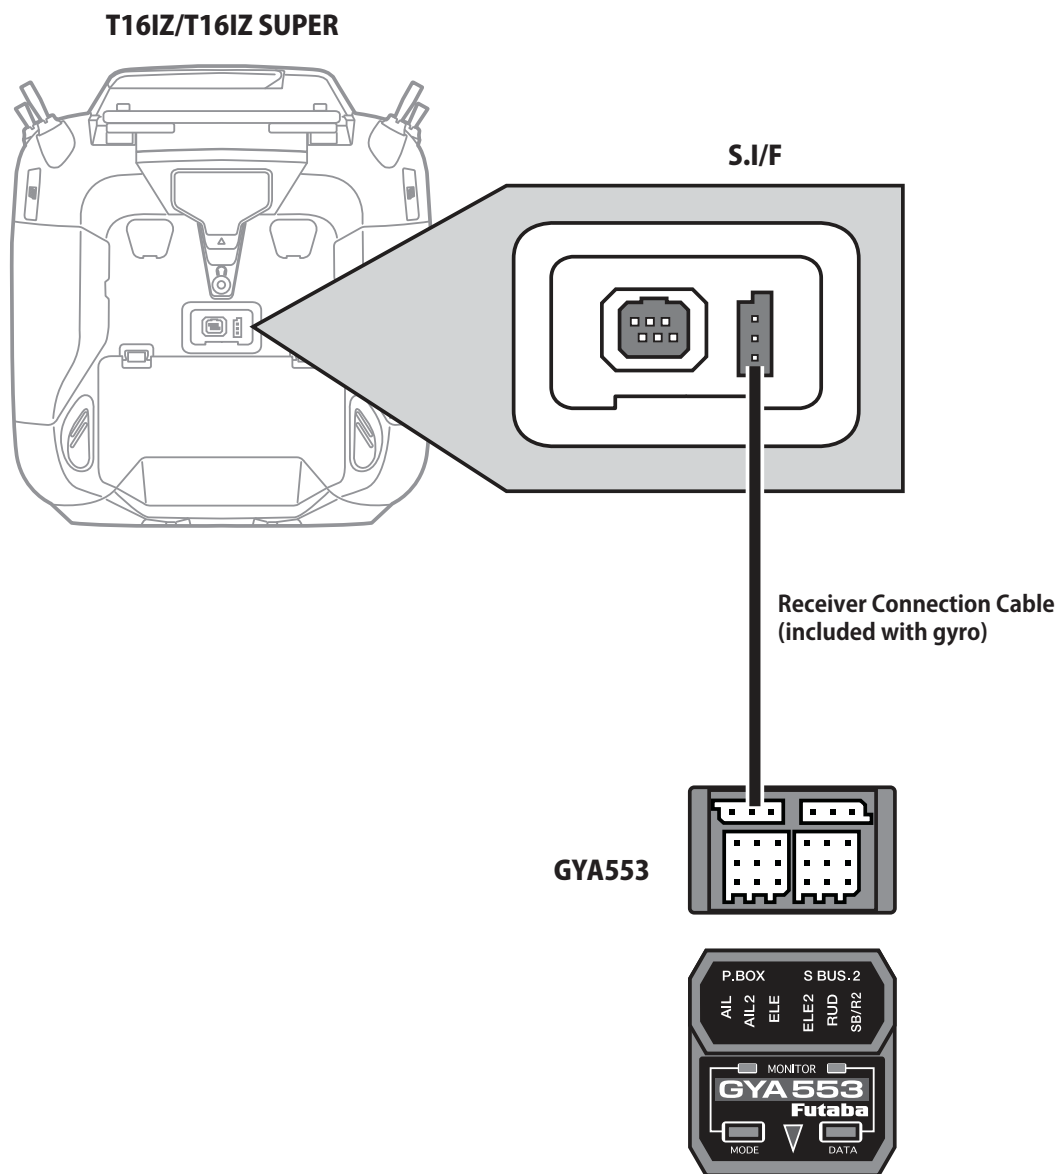

⚠ CAUTION

- ❶ Be sure to connect and disconnect the GYA553 and Transmitter connection cable with the power off.

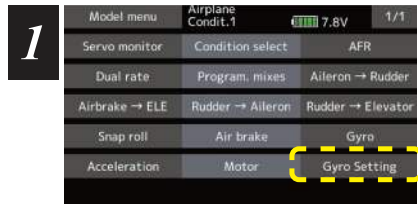


1. Select "Gyro setting" on the last page of Airplane Model Menu




2. Select "Start"

When "GY Settings Transfer" is selected, the gyro setting data saved in transmitter is written to the gyro.

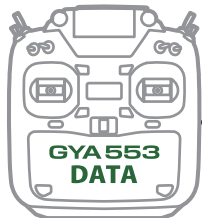


Select "Start"
This will download the gyro data to the transmitter.

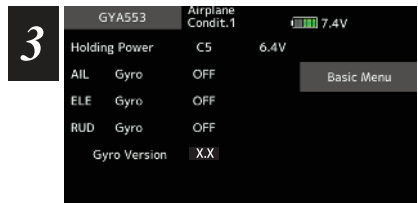


To Basic menu

3. Home screen is displayed

◆ When copying data from Gyro A to Gyro B

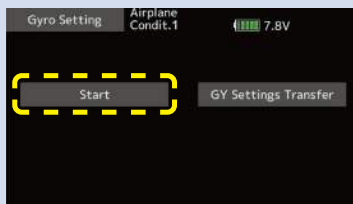


Connect the gyro A to the transmitter and press [Start]. (Enter the data of A into transmitter)

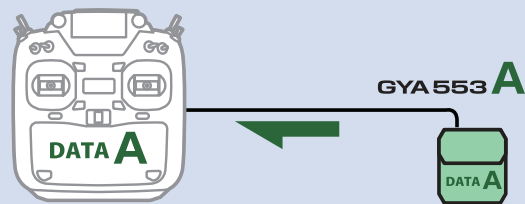

If you press Start here, the B data will be download to the transmitter and the A data will be lost.

Connect Gyro B to transmitter and press [GY Settings Transfer]. (Put data on A into gyro B)

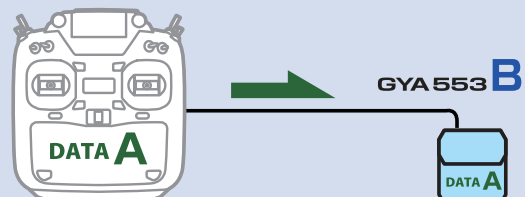

Home screen


On the home screen, basic information such as gyro operation mode, sensitivity, battery voltage are displayed.

Gyro operation mode / Gyro gain

Displays "AVCS" or "Normal" operation mode and gyro gain of aileron (roll), elevator (pitch) and rudder (yaw) axis.

GYA553 Software version

The software version of the connected GYA553 is displayed.

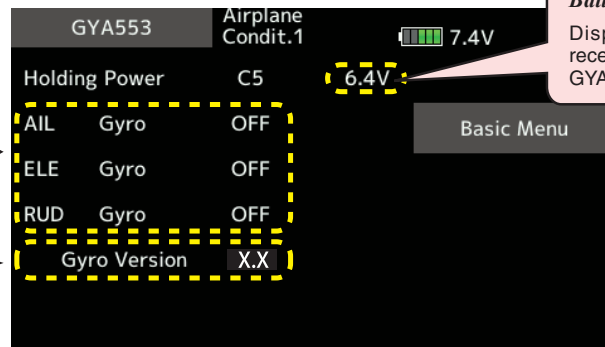


Basic menu


Home screen



Basic menu

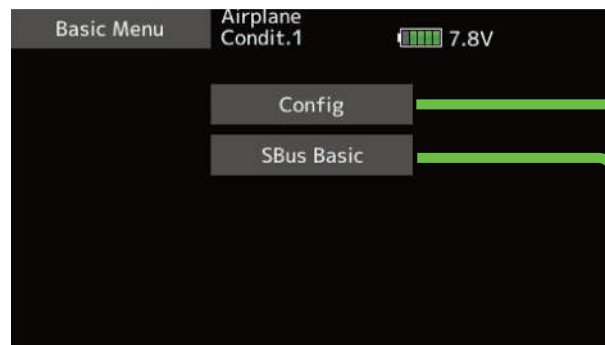

◆ Config

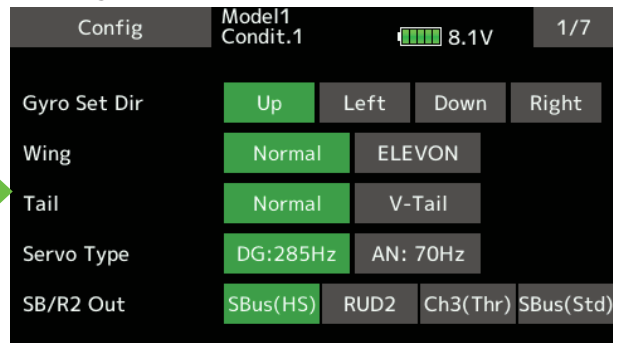


◆ S.BUS basic



Config 1/7 Gyro set mounting direction

Config	Model1 Condit.1	8.1V	1/7	
Gyro Set Dir	Up	Left	Down	Right
Wing	Normal	ELEVON		
Tail	Normal	V-Tail		
Servo Type	DG:285Hz	AN: 70Hz		
SB/R2 Out	SBus(HS)	RUD2	Ch3(Thr)	SBus(Std)

Set the mounting direction of GYA. Set mounting direction with reference to figure below.

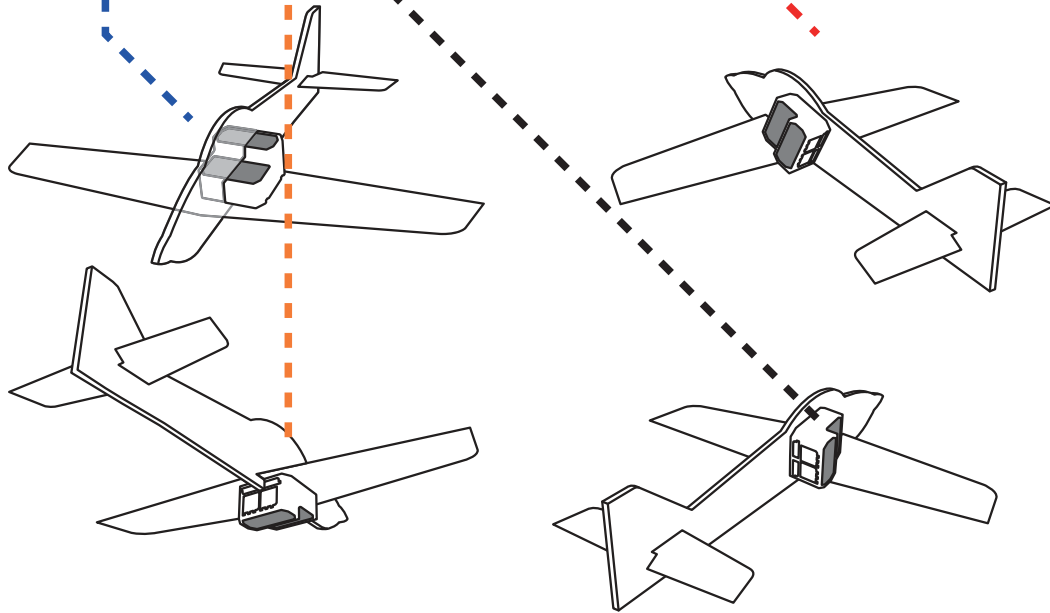


Config 1/7 WING/TAIL


Set with the wing type/tail type of GYA553. The wing type/tail type of the transmitter is not used and is normal.

- Turn off the elevon/V-tail mixing on the transmitter side.
- Do not use transmitter sub-trim. Adjust using the gyro neutral offset.
- When using the S.BUS servo, you can also use the neutral offset function of the S.BUS servo setting parameters.

Config	Model1 Condit.1	8.1V	1/7	
Gyro Set Dir	Up	Left	Down	Right
Wing	Normal	ELEVON		
Tail	Normal	V-Tail		
Servo Type	DG:285Hz	AN: 70Hz		
SB/R2 Out	SBus(HS)	RUD2	Ch3(Thr)	SBus(Std)

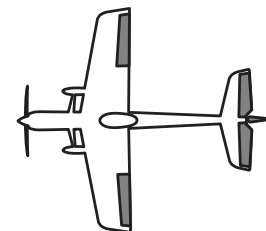

Select wing type

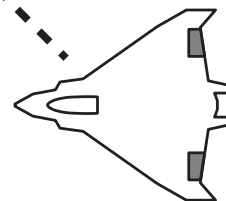


Select tail type



Config

Config 1/7 Servo type

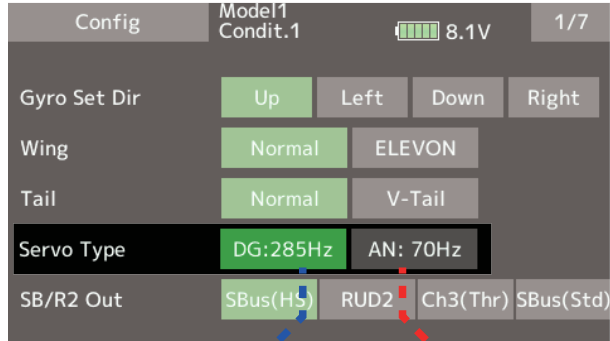

Digital servo

Analog servo


Select the servo type according to the servo to be used.

Digital servo → DG : 285 Hz

Analog servo → AN : 70 Hz

The stability of digital-servo mode of a flight increases in order to perform a high-speed control action.

Config 1/7 SB/R2 OUT

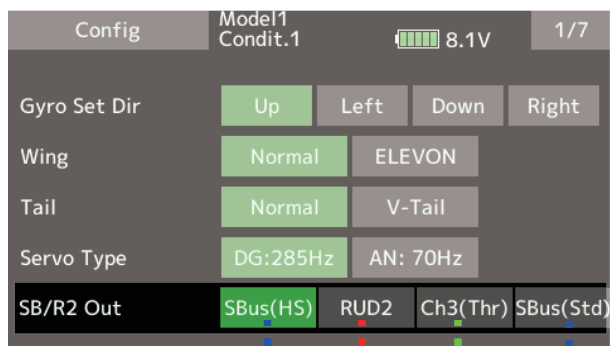

Select the SB/R2 port.

S.BUS(HS)
Connect SV servo


Rudder 2

Throttle

S.BUS(STD)

If S3175HV, DLPH-1, etc. do not work with S.BUS(HS), use S.BUS(STD).

When using two rudder servos

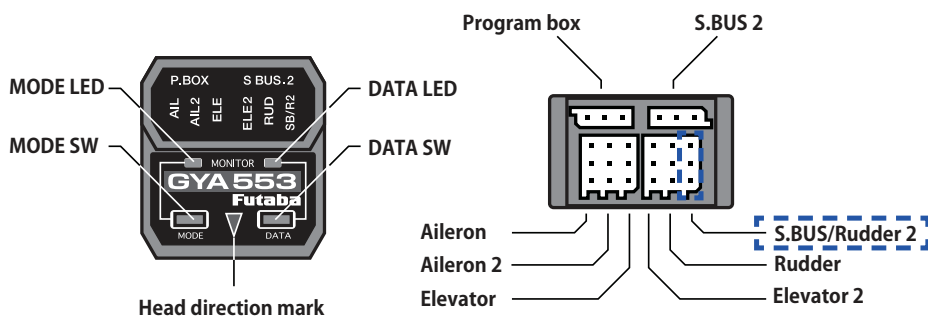


Config 2/7 Gyro direction

It is the direction setting of the gyro. Be careful as it will crash if the direction is reversed.


For dual aileron, dual elevator, and dual rudder aircraft, check the operating direction of each second aileron/elevator/rudder.

Config	Model1	Condit.1	8.1V	2/7
Gyro Dir				
AIL	Normal	AIL2	Normal	
ELE	Normal	ELE2	Normal	
RUD	Normal	RUD2	Normal	
AIL3	Normal	AIL4	Normal	


Turn the airplane to the right on the ground and check that the rudder operates to the left.

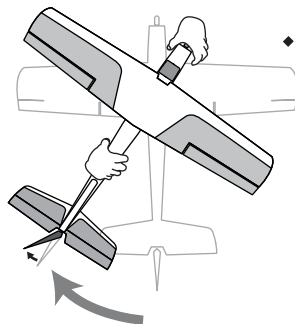

Tilt the airplane to the left on the ground and check that the ailerons operate to the right.

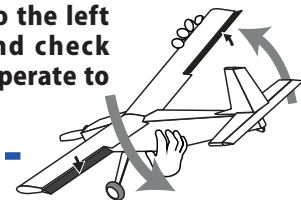


Tilt the airplane to the left on the ground and check that the 4-aileron operates to the right.

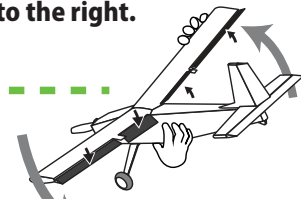

If the SB/R2 port output is set to "S.BUS(HS)" or "S.BUS(STD)", the setting menu will display AIL3 and AIL4 setting items.

* AIL3 and AIL4 settings cannot be set with the button settings on the GYA553 main unit.



Raise the airplane with its nose upward and check that the elevator operates downward.

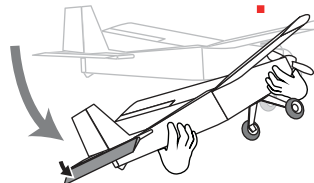

Config 3/7 Neutral offset

Config	Model1	Condit.1	8.1V	3/7
Neutral Offset				
AIL	+0	AIL2	+0	
ELE	+0	ELE2	+0	
RUD	+0	RUD2	+0	
AIL3	+0	AIL4	+0	

Neutral position setting for each servo.

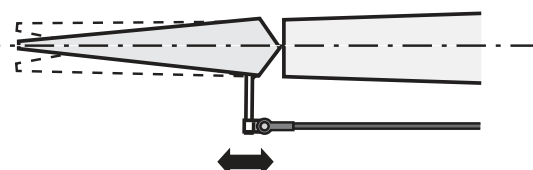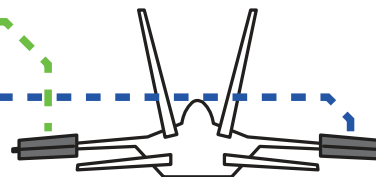

This will move the neutral to the desired position.

If the SB/R2 port output is set to "S.BUS(HS)" or "S.BUS(STD)", the setting menu will display AIL3 and AIL4 setting items.

* AIL3 and AIL4 settings cannot be set with the button settings on the GYA553 main unit.

Config 4/7 5/7 Servo limit

Config	Model1 Condit.1	8.1V	4/7
Srv.Limit			
AIL	100 %	100 %	
ELE	100 %	100 %	
RUD	100 %	100 %	
AIL3	100 %	100 %	


This is the limit setting for each servo. The position of the maximum operation is read into the gyro in the first setting.

Config	Model1 Condit.1	8.1V	5/7
Srv.Limit			
AIL2	100 %	100 %	
ELE2	100 %	100 %	
RUD2	100 %	100 %	
AIL4	100 %	100 %	


If the SB/R2 port output is set to "S.BUS(HS)" or "S.BUS(STD)", the setting menu will display AIL3 and AIL4 setting items.

* AIL3 and AIL4 settings cannot be set with the button settings on the GYA553 main unit.

Aileron example

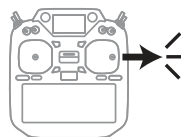


Stick to full right

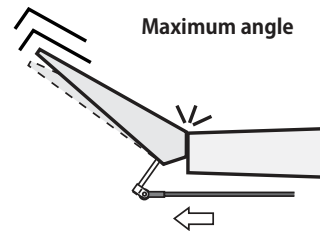

Adjust the value (%) to reach the maximum operating position



Stick to full left

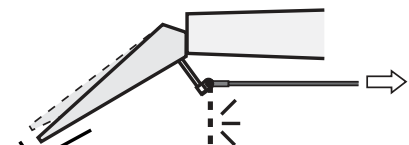

Maximum angle
Adjust the value (%) to reach the


Config

Config 6/7 Holding Power


It is a function to adjust the posture holding force of the aircraft in AVCS mode. Decreasing the value weakens the holding power and makes the operation feeling closer to the normal mode.

The current rate numbers C1 to C5 are displayed by operating the channel of the transmitter.


Like the flight condition function of the transmitter, you can set up to 5 different data for the attitude holding force rate of the aircraft in AVCS mode by operating the switch from the transmitter, and switch between them. You can set the holding power rate selector switch to the channel with the AFR function of the transmitter, and set the point for each rate on the AFR point curve to switch. It is also possible to use the flight condition function to work with the flight condition switch.

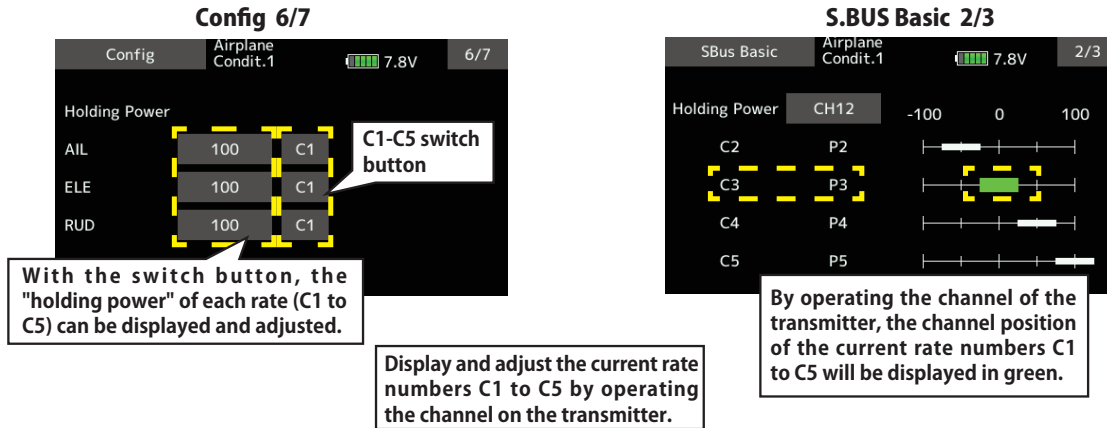

When set to SW of DG1 or DG2

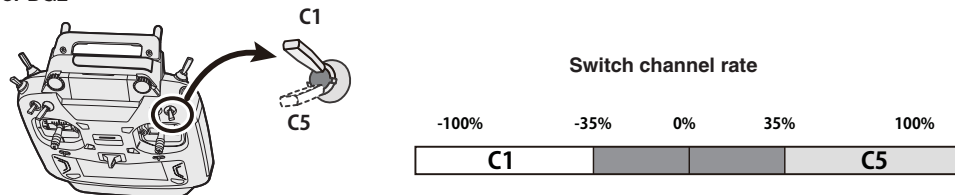

When set to dial or lever

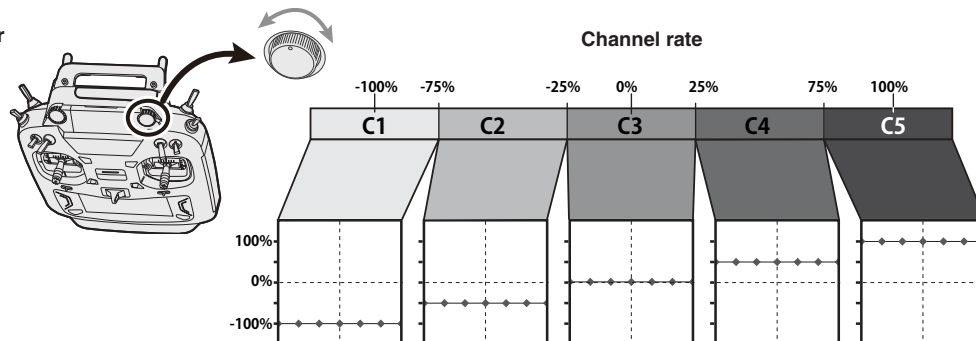


Config 7/7 Reset



Reset each Config item. It returns to the initial value.


SBUS Basic menu

Set the CH for each function according to the transmitter to be used. Any unused functions should be set to INH (Inhibited).

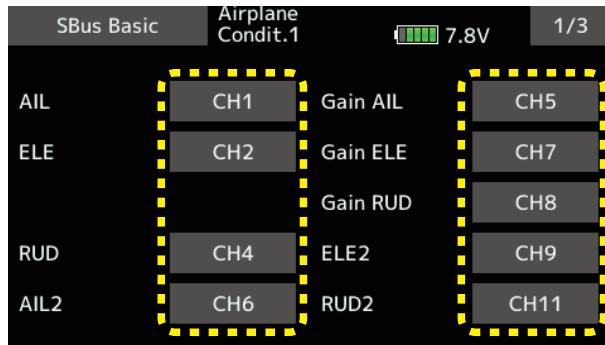

The channel of each function can be changed.


Tap to move to the rate switching CH setting page.

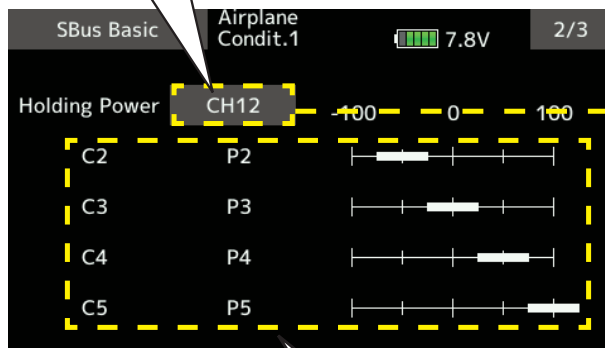


Holding Power C2 to C5

⚠ WARNING

① Always verify that the S.BUS function assignments match your transmitter's function (in the FUNCTION menu) assignments. If any changes are made within the transmitter function assignments, then it will also be necessary to make the changes within the S.BUS function assignments. To change the channel, GYA553 and T161Z must be connected.

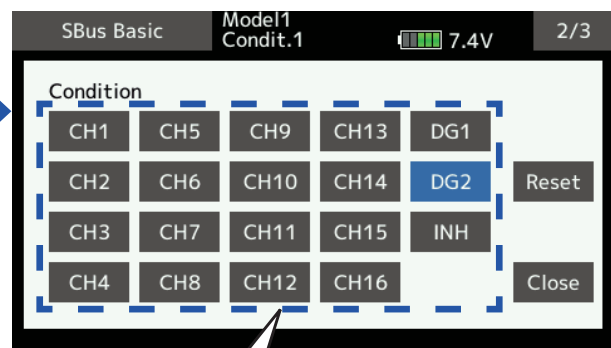

Tap the CH used for rate switching to select it.

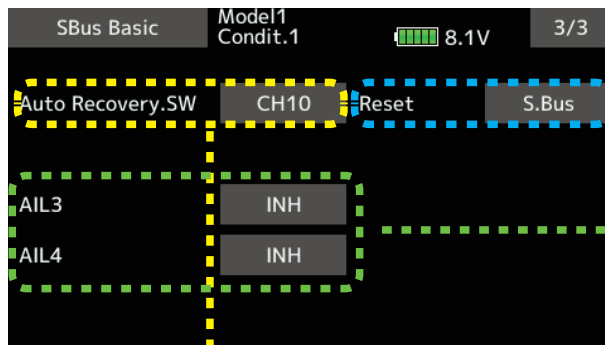


Reset each S.BUS function. It returns to the initial value.


■ CH setting items for AIL3 and AIL4 are displayed on the final screen of the S.BUS basic setting screen. By setting the operation CH of AIL3 and AIL4, the gyro-controlled signal is output to the corresponding CH of the S.BUS output.

* Match the operation CH and CH setting on the function setting screen on the transmitter side.

*When the AIL3 and AIL4 CH settings are INH, the gyro control is not performed and the data sent from the transmitter is output as is.

ON-OFF channel for auto recovery

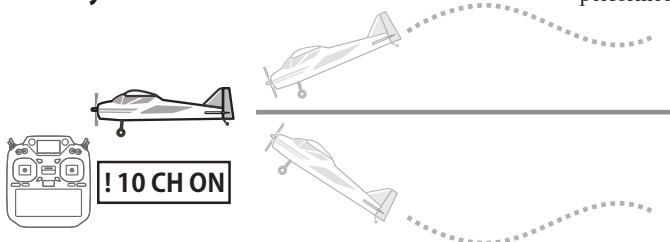

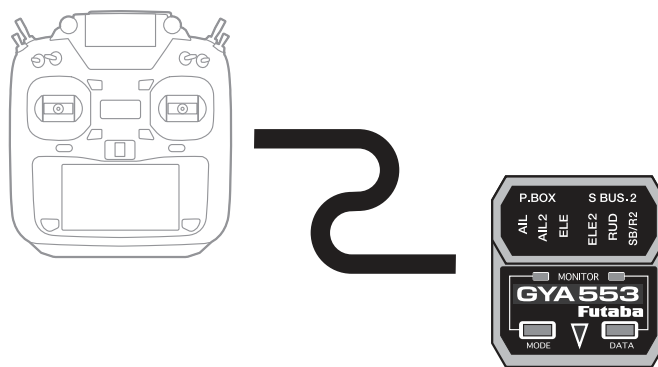

Futaba®